

# FRS200HT Master/Slave Mode Setting Instruction





Press function button for 10 second



Display shows “Ind”



Press Up or Down button to select “Ind” or “SLA”



Press function button again to finish setting.



Mode	Display	Description
Master	Ind	Default. Run time, Temperature and humidity functions work by user setting.
Slave	SLA	Run time, Temperature and humidity functions are off. Fan runs when AHU/Furnace is running.