

ENERGY RECOVERY VENTILATOR (ERV)

MODELS VEB165S / VEB165S-R

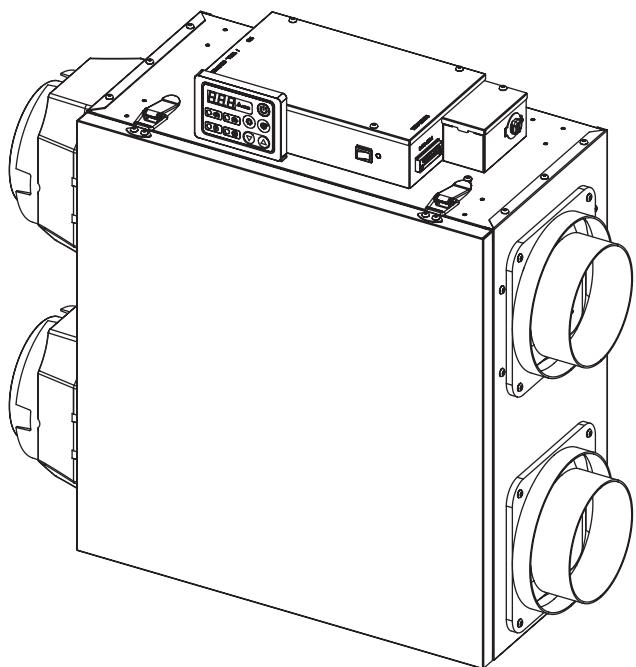


TABLE OF CONTENTS

GENERAL SAFETY INFORMATION	2
SPECIFICATIONS	5
UNPACKING AND LISTING	6
OVERVIEW	8
INSTALLATION	9
WIRING DIAGRAM	16
OPERATION	18
INSTALLATION (CONTROL PANEL)	19
CONTROL PANEL	21
MAINTENANCE	25
TROUBLE SHOOTING	27
WARRANTY	28

READ AND SAVE THESE INSTRUCTIONS

Address: 46101 Fremont Boulevard, Fremont, CA 94538

US Toll Free Number:

1-888-979-9889 – Technical Support

1-877-685-4384 – Customer Sales Support

www.deltabreez.com

Remove plastic bag of filter before installation

GENERAL SAFETY INFORMATION

Recognize and read these safety instructions carefully before installing and operating the ERV product. Below is the safety--alert symbol. When you see this symbol on the unit and in instructions or manuals, be alert to the potential for personal injury.

 WARNING	A WARNING alert symbol indicates a potentially hazardous situation that could result in serious injury or death.
CAUTION	A CAUTION alert symbol indicates a potentially hazardous situation that could result in minor or moderate injury.

NOTE: This symbol indicates an installer or a user note. Notes provide additional information to supplement the instructions, or tips for easier operation.



WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

1. Use this unit only in the manner intended by the manufacturer. If you have questions, contact the manufacturer.
2. Before servicing or cleaning this unit, disconnect power cord from electrical outlet.
3. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
4. Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent back drafting. Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating Refrigeration and Air Conditioning Engineers (ASHRAE) and local code authorities.
5. When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.
6. Do not use this unit with any solid-state speed control device.
7. This unit must be grounded. The power supply cord has a 3-prong grounding plug for your personal safety. It must be plugged into a mating 3-prong grounding receptacle, grounded in accordance with the national electrical code and local codes and ordinances. Do not remove the ground prong. Do not use an extension cord.
8. Do not install in a cooking area or connect directly to any appliances.
9. Do not use to exhaust hazardous or explosive materials and vapors.
10. When performing installation, servicing or cleaning this unit, it is recommended to wear safety glasses and gloves.
11. When applicable local regulation comprises more restrictive installation and/or certification requirements, the aforementioned requirements prevail on those of this document and the installer agrees to conform to these at his own expense.

CAUTION

1. To avoid prematurely clogged filters, turn the unit OFF during construction or renovation.
2. Please read specification label on product for further information and requirements.
3. Be sure to duct air outside – Do not intake/exhaust air into spaces within walls or ceiling or into attics, crawl spaces, or garage. Do not attempt to recover the exhaust air from a dryer or a range hood.
4. Do not run any air ducts directly above or within 2 ft (0.61m) of a furnace or its supply plenum, boiler, or other heat producing appliance. If a duct has to be connected to the furnace return plenum, it must be connected 10 ft (3.1m) away from plenum's connection to the furnace.
5. The ductwork is intended to be installed in compliance with all applicable local and national codes.

GENERAL SAFETY INFORMATION


6. When leaving the house for a long period of time (more than two weeks), a responsible person should regularly check if the unit operates adequately.
7. If the ductwork passes through an unconditioned space (e.g.: attic), the unit must operate continuously except when performing maintenance and/or repair. Also, the ambient temperature of the house should never drop below 18°C (65°F).
8. At least once a year, the unit mechanical and electronic parts should be inspected by qualified service personnel.
9. Do not use your unit during construction or renovation of your house or when sanding drywall. Certain types of dust and vapors may damage your system.
10. Make sure at all times that the outside intake and exhaust hoods are free from any snow during the winter season. It is important to check your unit during a big snow storm, so it doesn't draw in any snow. If this is the case, please turn the unit OFF for a few hours. Also check intake and exhaust hoods year-round for debris, such as leaves and grass clippings.
11. Since the electronic control system of the unit uses a microprocessor, it may not operate correctly because of external noise or very short power failure. If this happens, unplug the unit and wait approximately 10 seconds. Then, plug the unit in again.
12. Do not make excessive use of fragrance appliances, candles, or chemicals since some may damage the unit components material.

 WARNING	The wearing of safety glasses and gloves is recommended when installing, maintaining or cleaning the unit to reduce the risk of injury that could be caused by the presence of thin metal and/or moving parts.
 CAUTION	Make sure that no piece of mineral wool or fiberglass insulation will enter in the unit during installation. Otherwise, this could reduce airflow and generate vibrations and noise in the unit.
 PROHIBITED	IMPORTANT - This damage alert symbol indicates a situation that may result in damage to the equipment.

IMPORTANT

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

1. Make sure the electric service supply voltage is AC 120V, 60Hz.
2. Follow all local electrical and safety codes, as well as the National Electrical Code (NEC) and the Occupational Safety and Health Act (OSHA).
3. Always disconnect the power source before working on or near the ventilating fan, motor, or junction box.
4. Protect the power cord from sharp edges, oil, grease, hot surfaces, chemicals or other objects.
5. This unit is UL listed for use over a bathtub or shower when installed in a GFCI-protected branch circuit.
6. Do not kink the power cord.
7. Do not install the unit where ducts are configured as shown below.

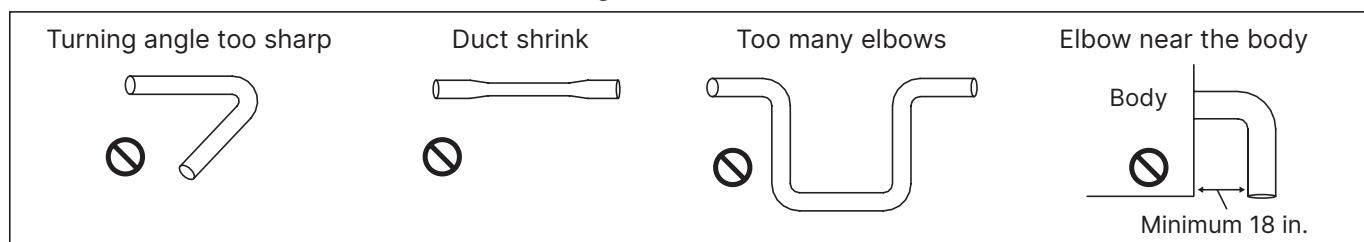


GENERAL SAFETY INFORMATION

CAUTION

Do not install the equipment in the following places:


● High Temperature or the Heated Place

ERV equipment should not be installed in places with temperatures exceeding 104°F(40°C). High temperature will cause distortion or damage to the filters, heat exchanger core or motors.

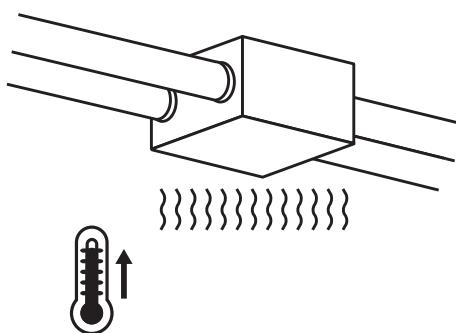


● Wet Place

Do not install in places where humidity is over 85% such as in the bathroom, or it will cause electric shock or electric device malfunction.

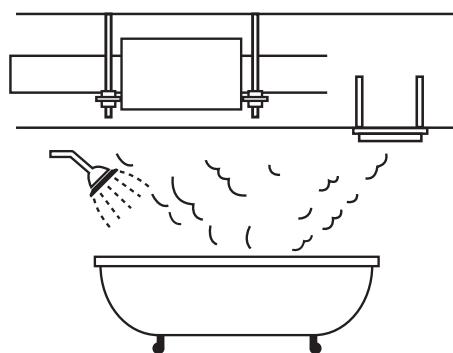

● Avoid in-take of Heavy Oil, and Smoke


Do not position air in-takes over areas where heavy oil and smoke are present, as this will damage the filter and heat exchanger core.

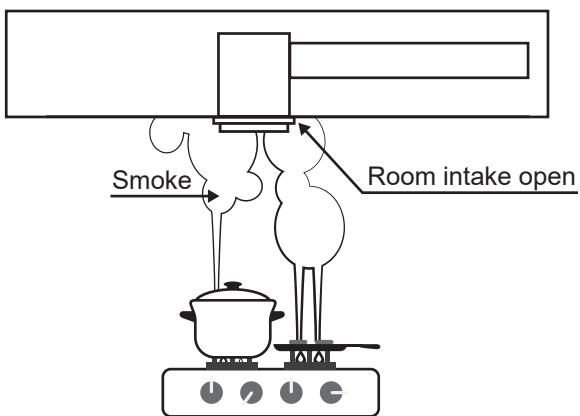

- Make sure the inspection opening is convenient for maintenance of the filter, the ERV core, and inspection of the machine.

- Do not install the machine in the places such as machinery factory or chemical factory where acid, alkali, organic solvent, dope or other harmful air and erodible air such as dust, oil and smoke may be produced.


- Remove filter from plastic bag before installation.

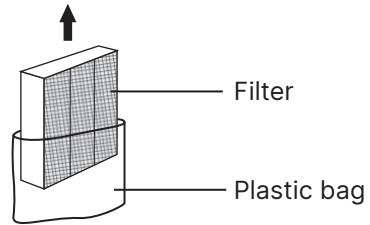

SPECIFICATIONS

Dimensions	Unit - 21 $\frac{1}{8}$ "(537 mm) L x 22 $\frac{1}{4}$ "(564 mm) W x 11 $\frac{1}{5}$ "(285 mm) H Energy Recovery CORE - 11 $\frac{3}{4}$ " (360 mm) x 11 $\frac{3}{4}$ " (360 mm) x 9 $\frac{7}{16}$ " (240 mm)
Weight	46 lbs (20.8 kg)
Power	120 Vac, 2.5 Amp Maximum. Unit Equipped with 4 ft (1.2 meter) Grounded Power Cord or 6 inch (152.4 mm) hardwire
Filter	A plastic mesh pre-filter filters RA. A MERV 13 and Plastic Mesh filter filters OA Side
Airflow	165 CFM (78 L/s) at 0.4" w.g. (100 Pa) External Differential Static Pressure
Fan speed	Multi- Speed at 30 CFM to 165 CFM

VENTILATION PERFORMANCE

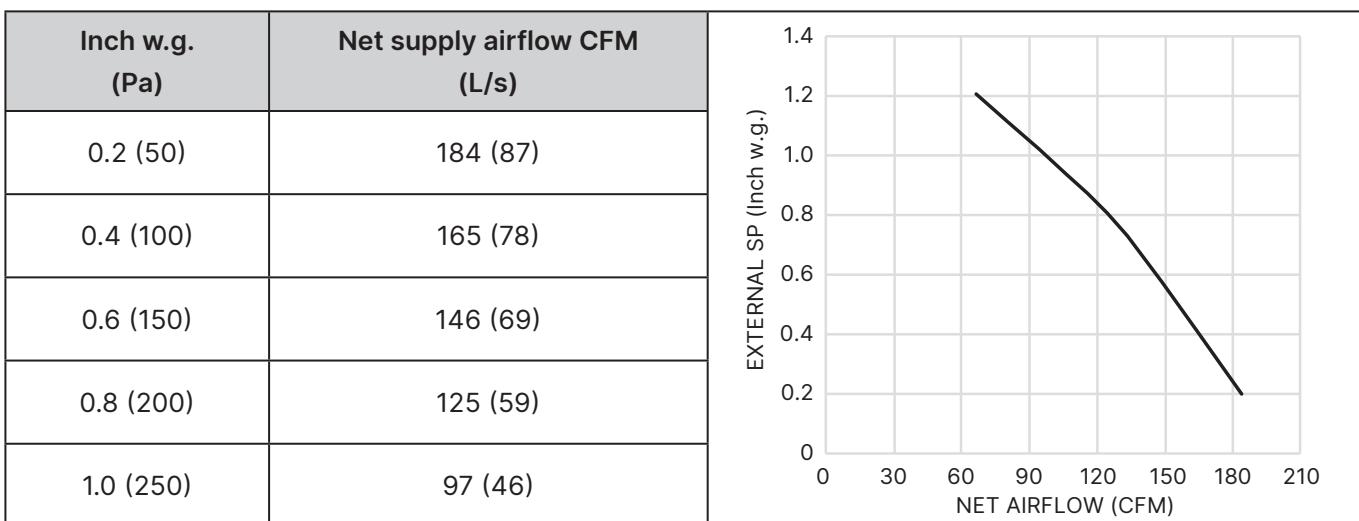

ENERGY PERFORMANCE

Temp Mode	Supply Temp (Outside)	Net Airflow	Sensible Recovery Efficiency	Adjusted Sensible Recovery Efficiency	Total Recovery Efficiency	Adjusted Total Recovery Efficiency	Latent Recovery / Moisture Transfer	Power Consumed
Heating	32°F (0°C)	36 CFM (17 L/s)	90%	94%	-	-	0.85	18W
Heating	32°F (0°C)	64 CFM (30 L/s)	84%	87%	-	-	0.74	27W
Heating	32°F (0°C)	127 CFM (60 L/s)	75%	78%	-	-	0.61	65W
Heating	-13°F (-25°C)	61 CFM (29 L/s)	61%	62%	-	-	0.56	26W
Cooling	95°F (35°C)	36 CFM (17 L/s)	-	-	81%	84%	0.81	19W
Cooling	95°F (35°C)	64 CFM (30 L/s)	-	-	73%	75%	0.71	30W

- Engineering design and specifications to change without notice


Requirements and standards

Complies with the UL 1812 and C 22.2 No. 113-18 requirements regulating the construction and installation of Heat Recovery Ventilators. Technical data was obtained from published results of test relating to CSA C439 Standards.

UNPACKING LIST









Please unpack and remove the carton carefully, then follow the diagram below to verify all items are present.

OPENING

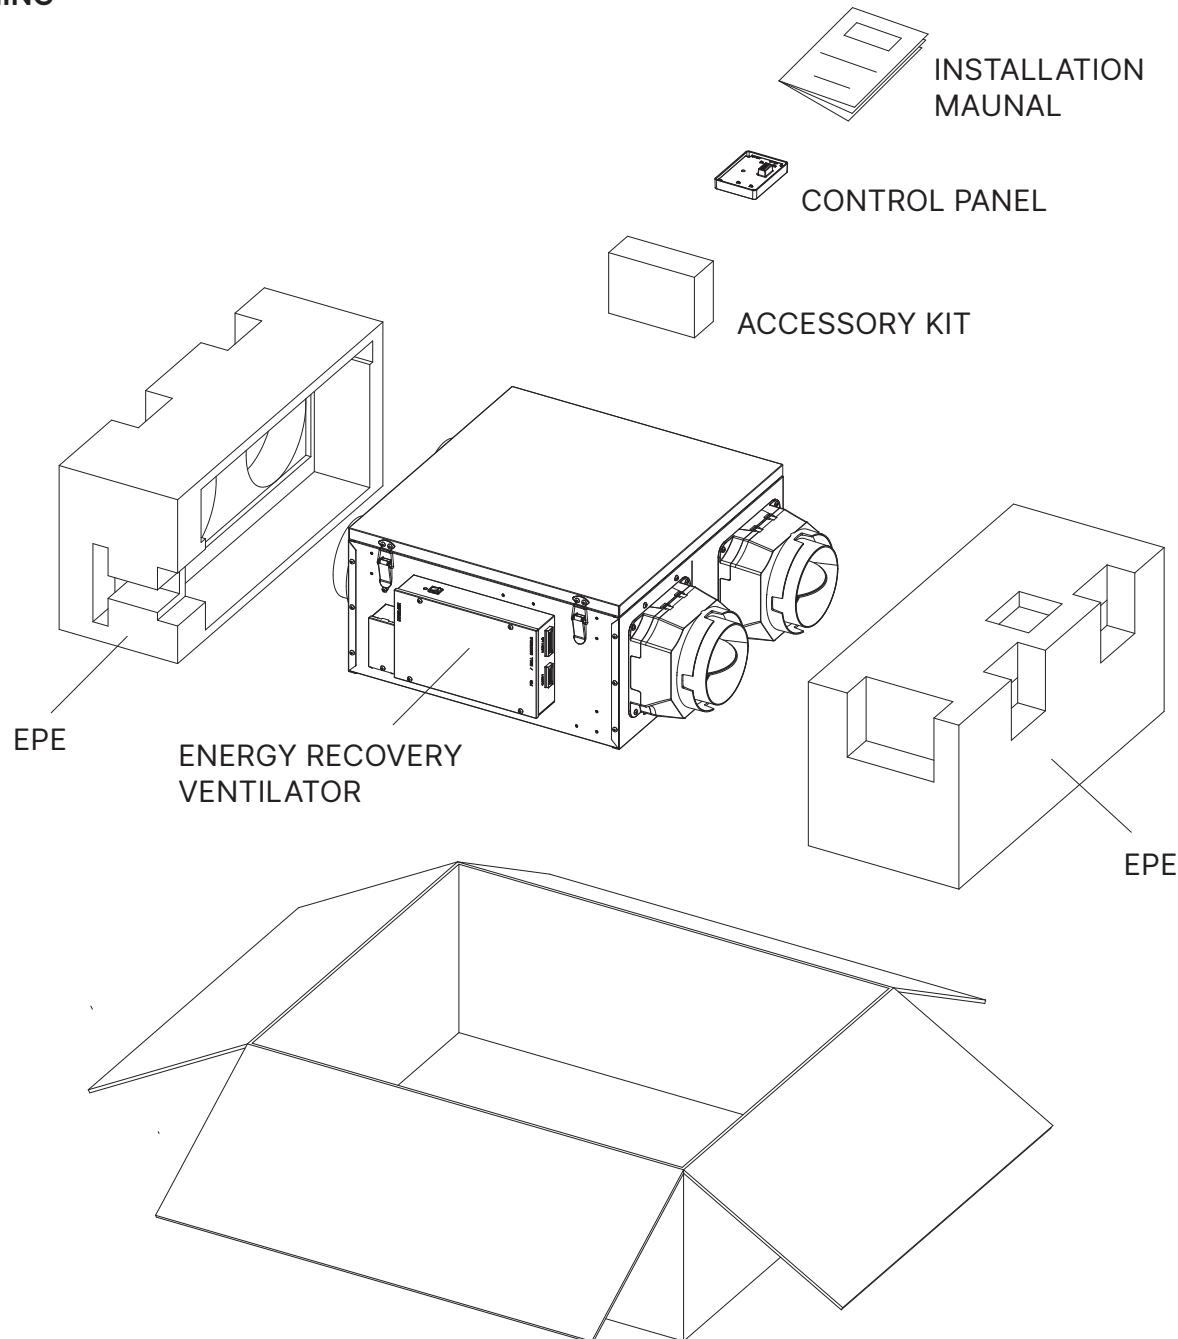


UNPACKING LIST

PART LIST

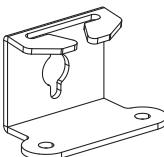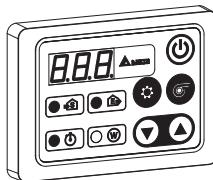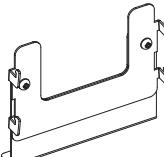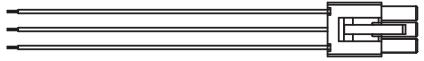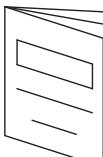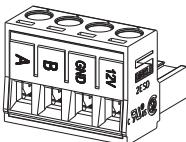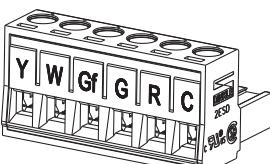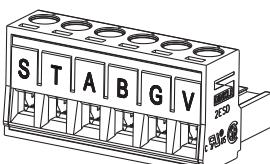
Part name	Appearance	Quantity
MOUNTING BRACKET		4
CHAIN		4
CONTROL PANEL		1
CONTROL PANEL BRACKET		1
MACHINE SCREW (M4 x 6 mm)		10
WOOD SCREW (T4 x 25 mm)		4
WALL SCREW (T4 x 25mm)		2
ANCHOR		2
CABLE TIES		4
Connector with wire (Hardwire application)		1
INSTALLATION MAUNAL		1
4P TERMINAL	Control 	1
6P TERMINAL	Interlock  Wall switch 	1 of each

OVERVIEW


Energy recovery ventilator shall be Delta Breez model VEB165S Series, ECM-motor engineered to run continuously for a minimum 60,000 hours, airflow rating of 30 to 165 CFM at 0.4" w.g. static pressure, and efficiency rating of not less than 1.3 CFM/Watt at 0.4" w.g. static pressure. Housing shall be insulated to reduce condensation and noise. MERV 13 filter is a superior filter and is required in many cases by code or IAQ program recommendations. Backdraft damper shall be motorized. Interlock control can be hardwired to the HVAC system. The filter alert has two step alert for cleaning and replacement.

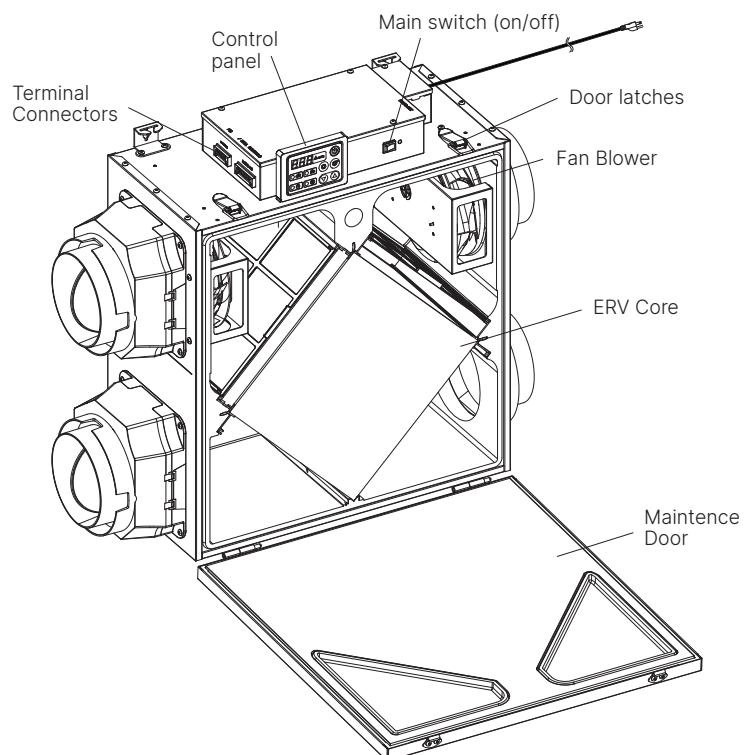

VEB165S

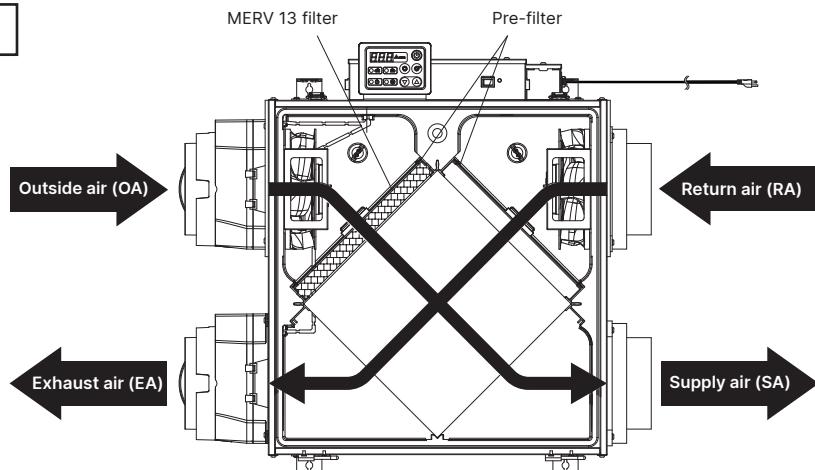


VEB165S-R

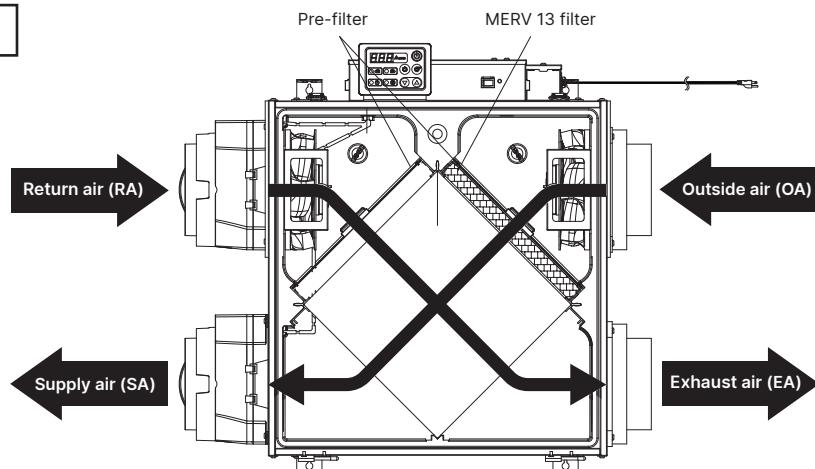


INSTALLATION (Wall mounted)

1. Using the hardware provided, install the mounting brackets on the unit. It is important to isolate the mounting brackets from the mounting surface to minimize vibration.
2. Use the provided MACHINE SCREW (M4 × 6 mm) to install the mounting brackets onto the surface of the equipment.

4 pcs mounting brackets

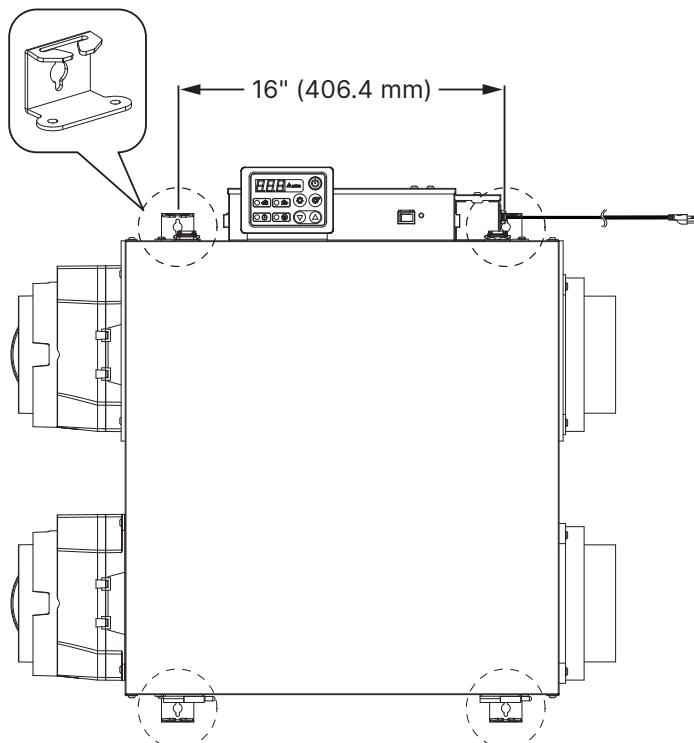


3. Choose the appropriate location(s) for the mounting brackets (see illustration right) according to stud(s) position.
4. Insert the provided brackets under the unit frame (see illustration hereafter).
5. Secure the bracket via the screw T4 × 25 mm.

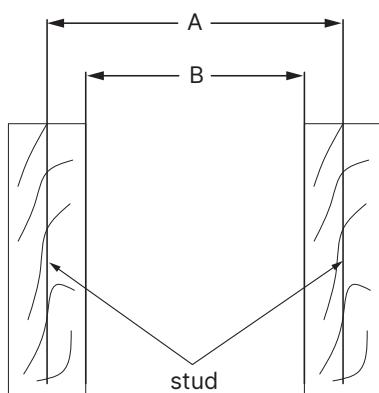

Unit : inches (mm)


A	B
16 (406.4)	14½ (368.3)

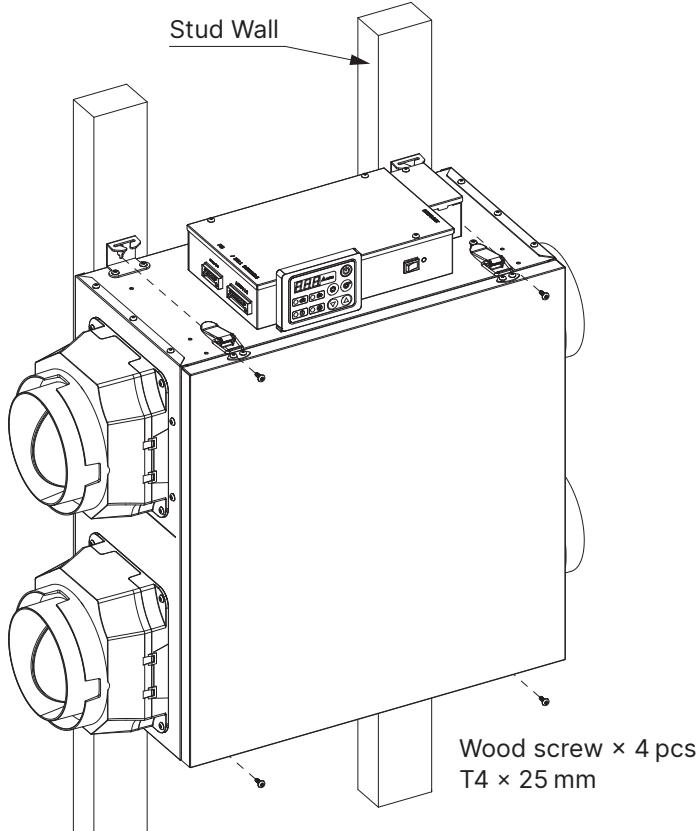


INSTALLATION (Wall mounted)

6. Using the T4 × 25 mm screws provided, secure the unit to the wall making sure that the 4 screws engage into a stud.

4 pcs mounting brackets

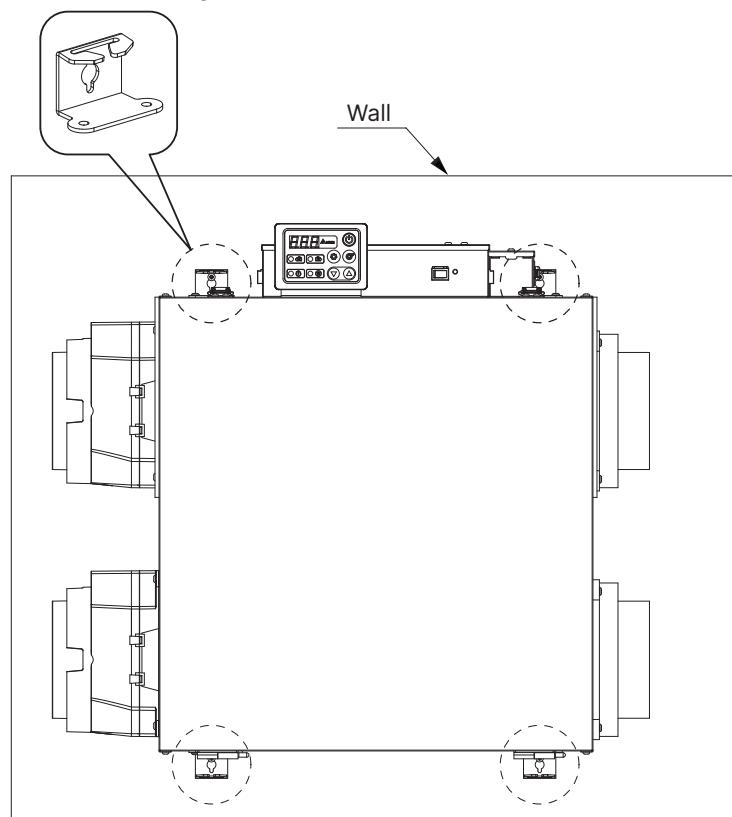


7. Always make sure that the unit is no more than $\frac{1}{4}$ " off level.

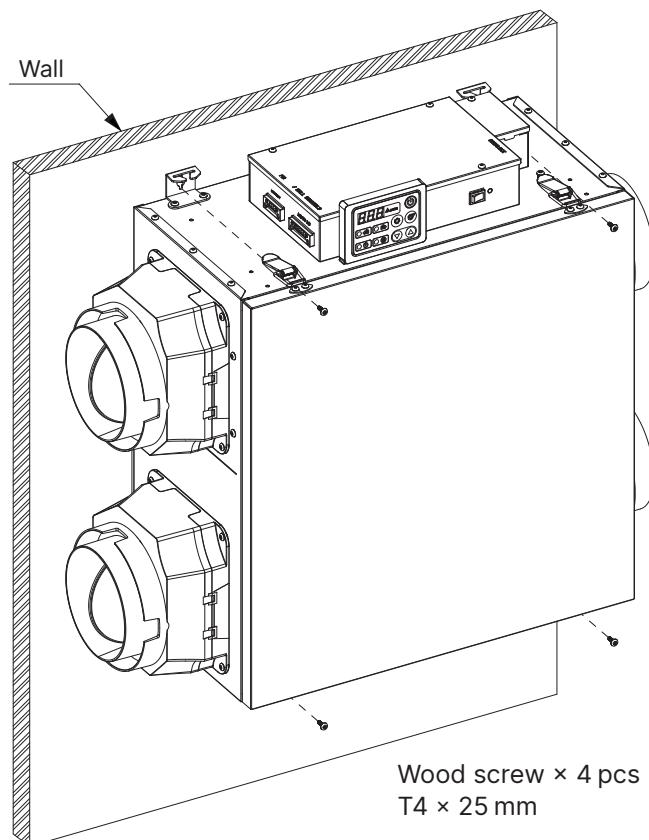

INSTALLATION (Chain mounted)

1. Insert chains into mounting brackets on the unit.
2. Hang the unit to the joists using the provided chains and wood screws \times 4 pcs (T4 \times 25 mm).
3. Always make sure that the unit is no more than $\frac{1}{4}$ " off level.


Unit: inches (mm)

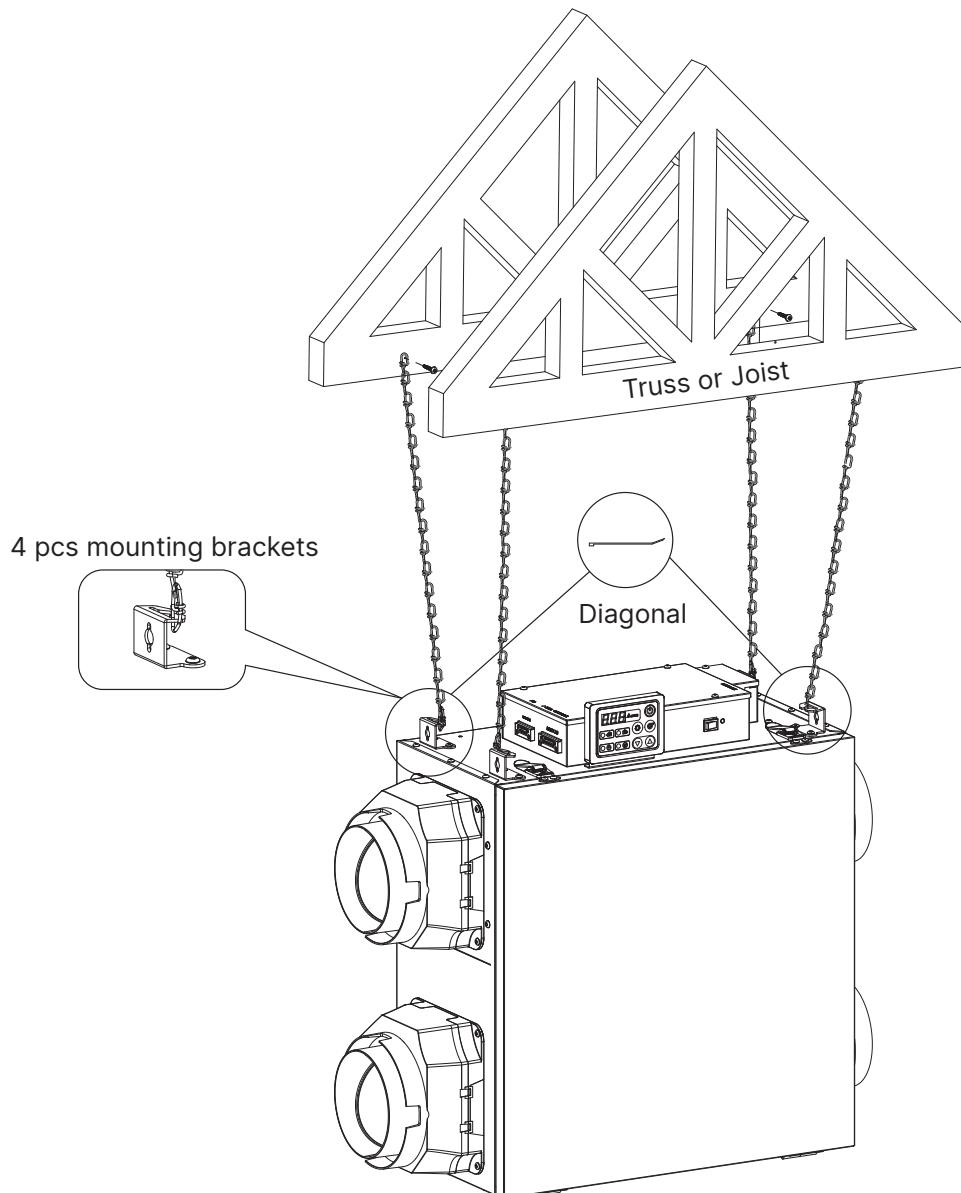

INSTALLATION (Ductwork)

 WARNING	<p>Never install a stale air exhaust register in a room where there is a combustion device, such as a furnace, gas water heater, fireplace or any appliance or equipment that can generate gaseous contaminants, or pollutants. The exhaust register could create negative pressure in the room and may impair proper evacuation of the gas or pollutants, which may have severe health consequences.</p>
CAUTION	<p>If ducts have to go through an unconditioned space (e.g.: attic), always use insulated ducts to prevent condensation formation inside and outside ducts, which could cause material damage and/or mold growth. Moreover, if fresh air to building duct and/or stale air from building duct goes/go through an unconditioned space, the unit must be set to operate continuously in cold conditions (below 10°C/50°F). Continuous air movement inside ducts will prevent condensation formation. The unit can be stopped temporarily for maintenance and/or repair purposes in such conditions.</p>

FULLY DUCTED SYSTEMS

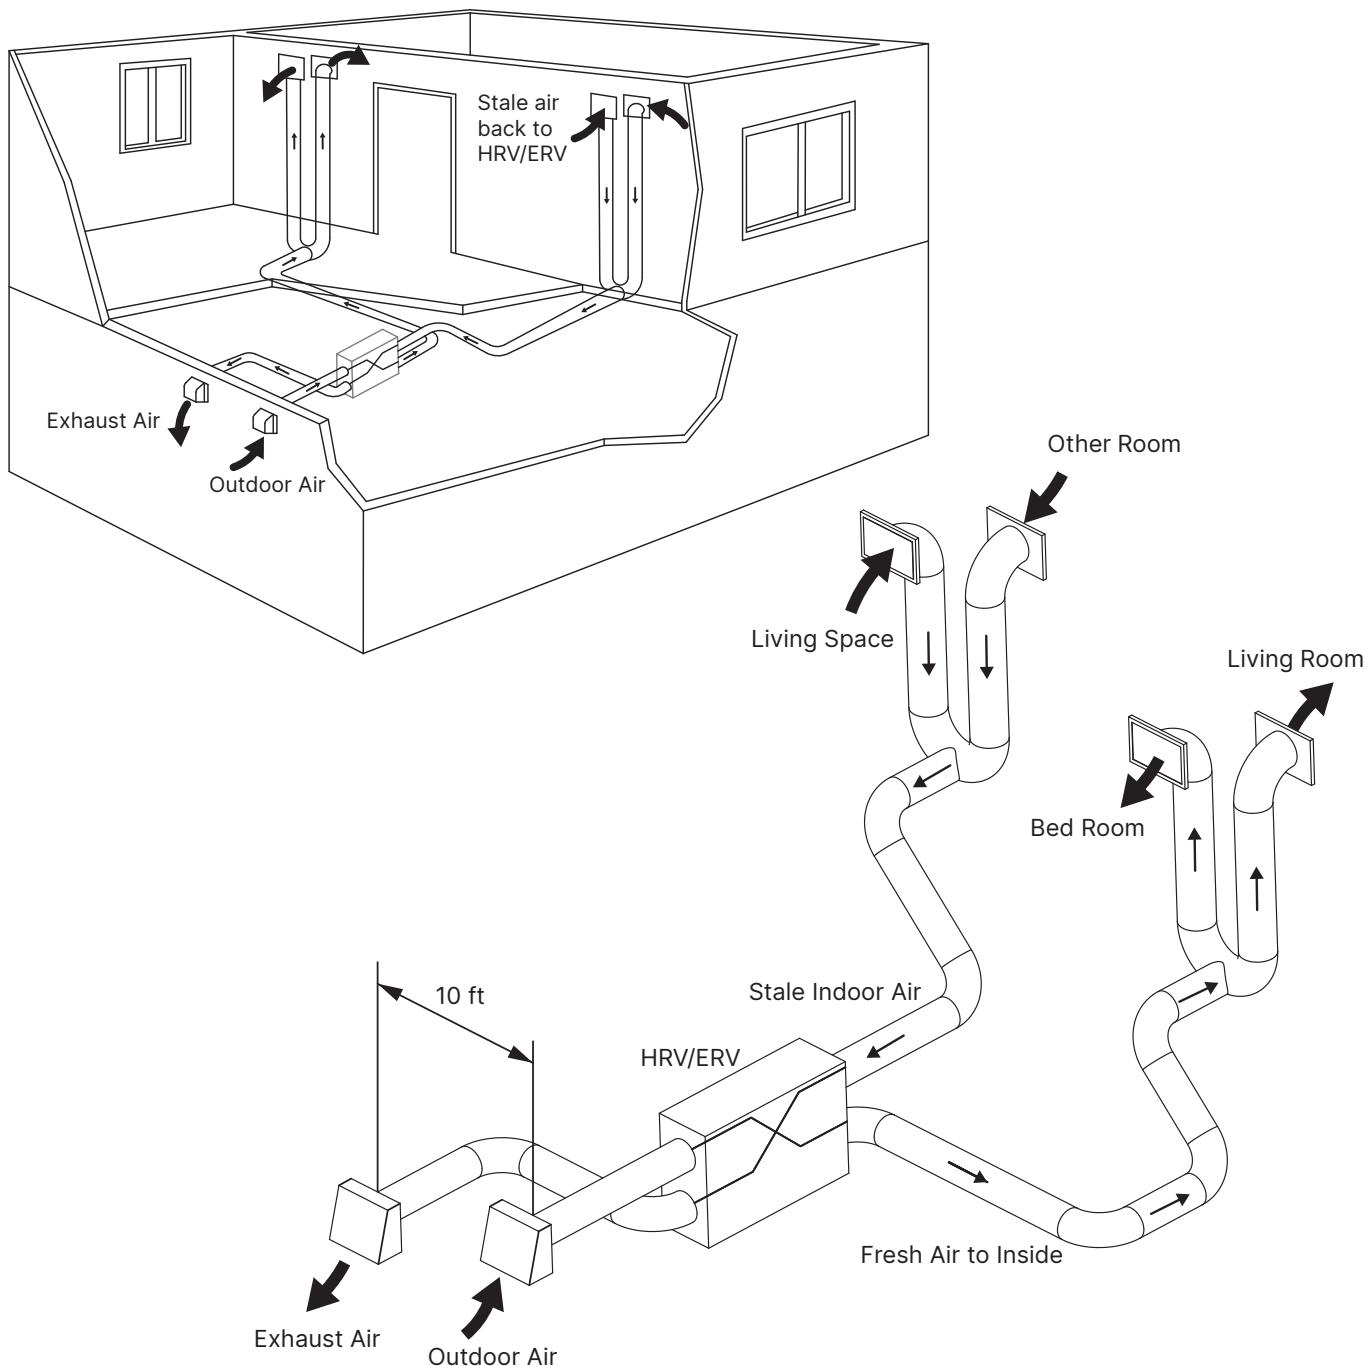


INSTALLATION (Ductwork)

The installation method must be interlocked between HRV/ERV and Furnace/Air Handler, otherwise this is prohibited.

A+B=10 ft or greater from furnace/air hander fan to HRV/ERV fresh air to inside duct

C=Space a minimum of 3 ft apart


D=Space a minimum of 10 ft apart

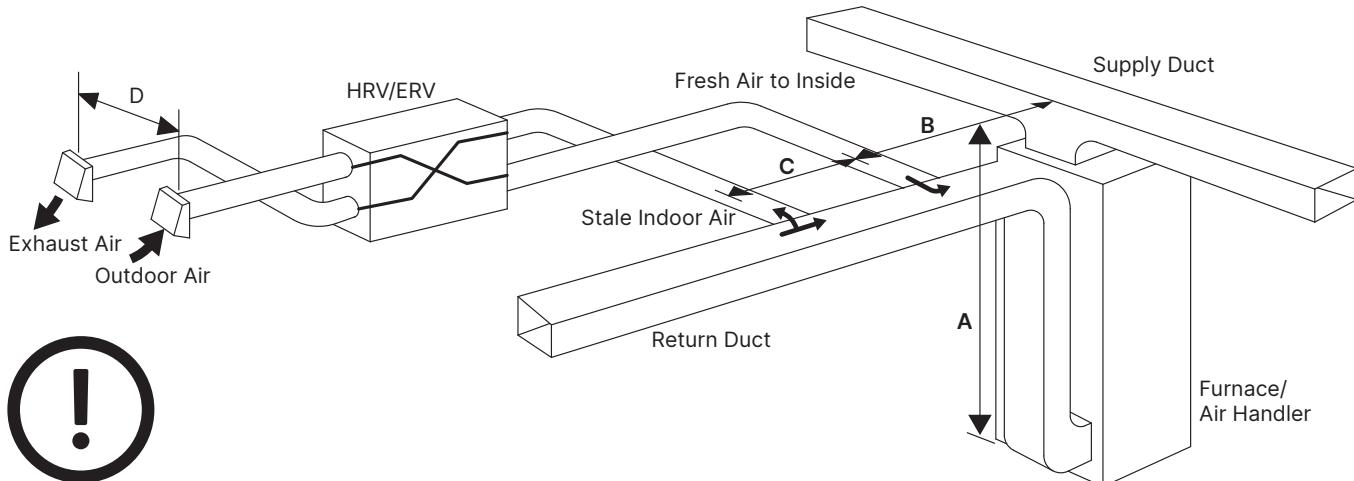

CAUTION


Use the following procedure to connect the insulated flexible ducts to the ports of the unit (exhaust to outside and fresh air from outside).

1. Expose the flexible duct by pulling back the insulation, and place it over the inner port ring.
2. Attach the flexible duct to the port using a tie wrap.
3. Seal the joint using duct tape.
4. Pull the insulation and vapor barrier over the joint, tuck them between the inner and outer rings of the double collar and fasten them in place using duct tape.

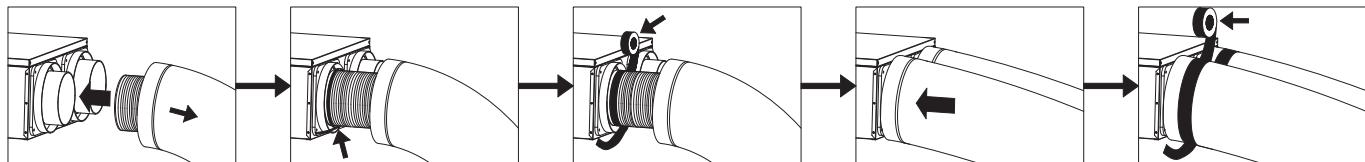

Connecting insulated flexible air ducts to the ports


Method (1): Fully Dedicated Air Duct

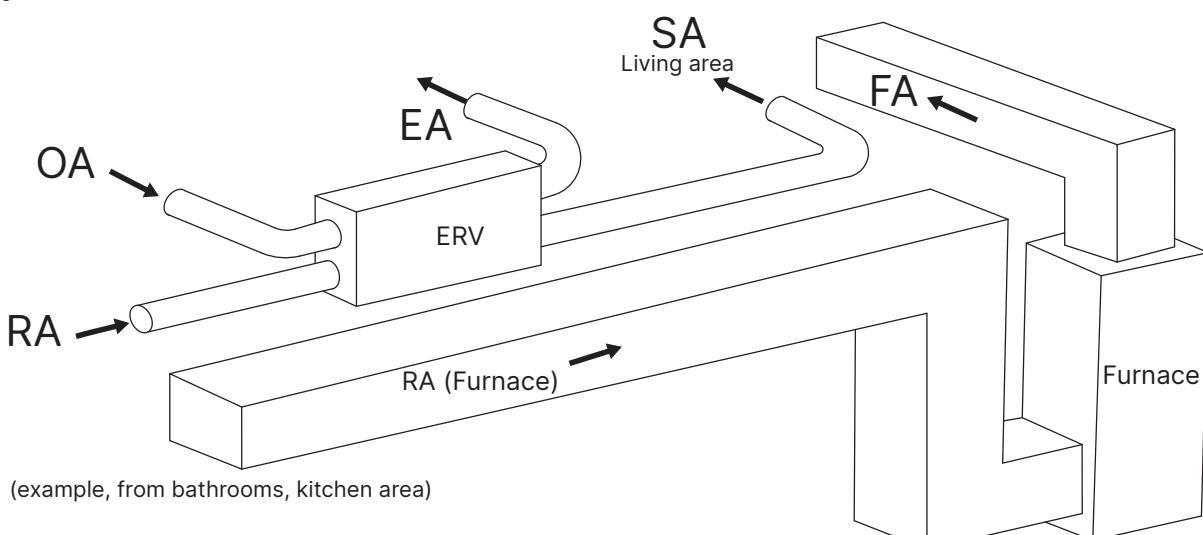

INSTALLATION (Ductwork)


Method (2):

Separate Room Exhaust Air Pick-Up / Fresh Exchanged Outside Air to Central System Return Air

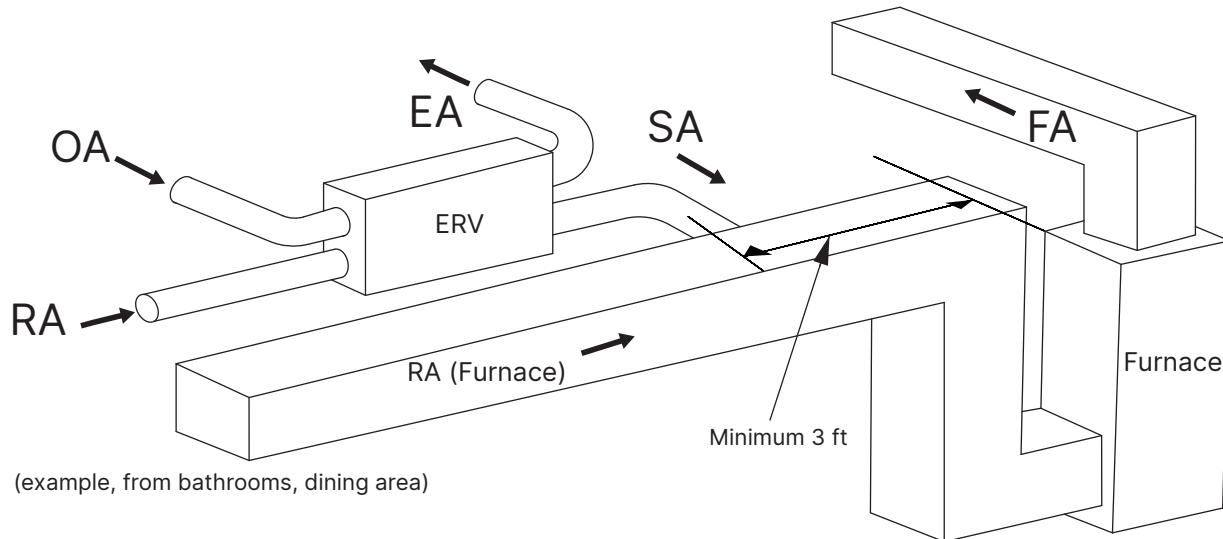

Method (3):



Exhaust Air from Return Duct/ Fresh Air Ducted to Supply Air Duct

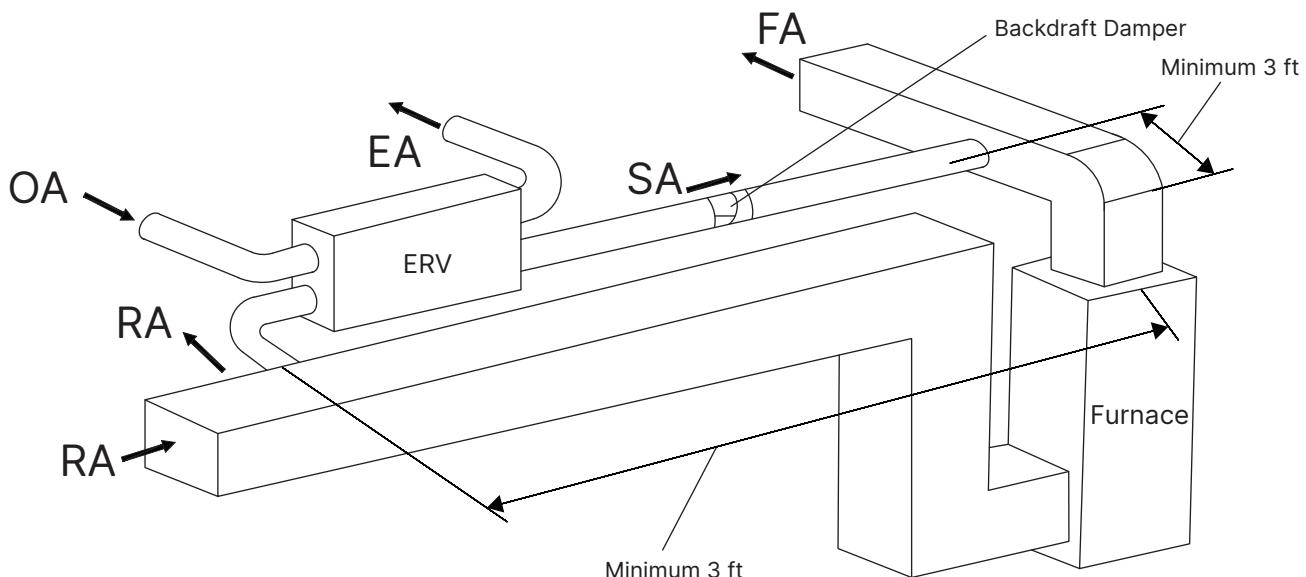


INSTALLATION (Ductwork)

CAUTION

The exhaust outlet and fresh air inlet on the outside of the building should be at least 10 feet apart to avoid cross contamination. The Outdoor fresh air inlet must be located a minimum of 10 feet from any other exhaust vent, gas meter, outdoor grill, or source of open flame. Fresh air inlets must also be located a minimum of 10 feet from oil tank fill tubes, garbage cans and any other source of contamination. Fresh air inlet and outlets should not be installed in areas of stagnant air. Fresh air inlet and outlet hoods should be located a minimum of 1.5 feet above the normal snow level.

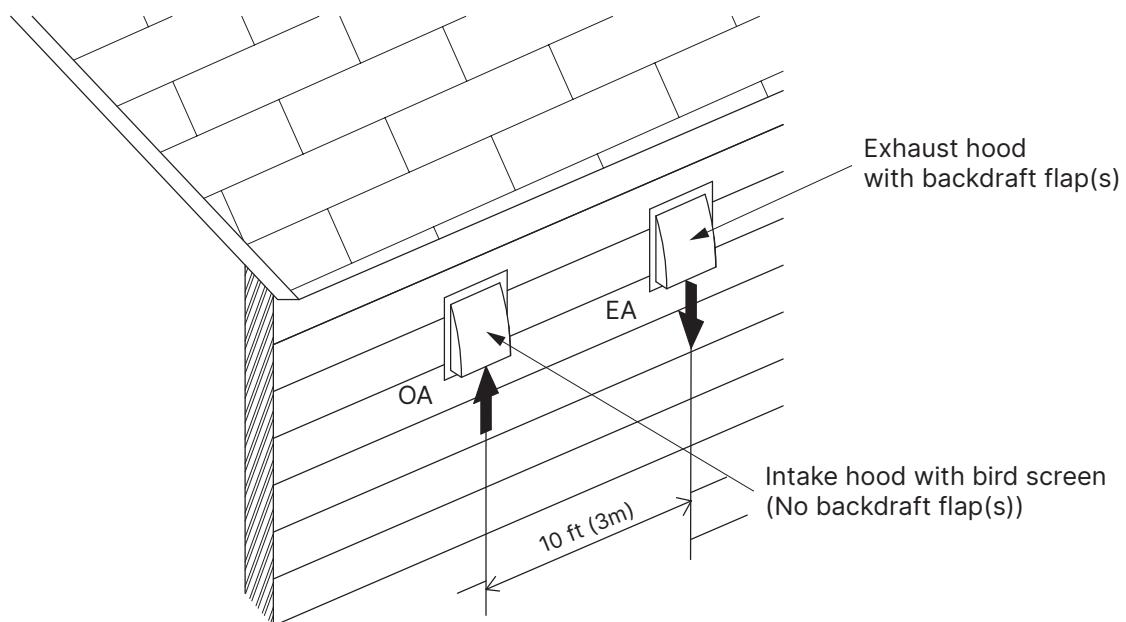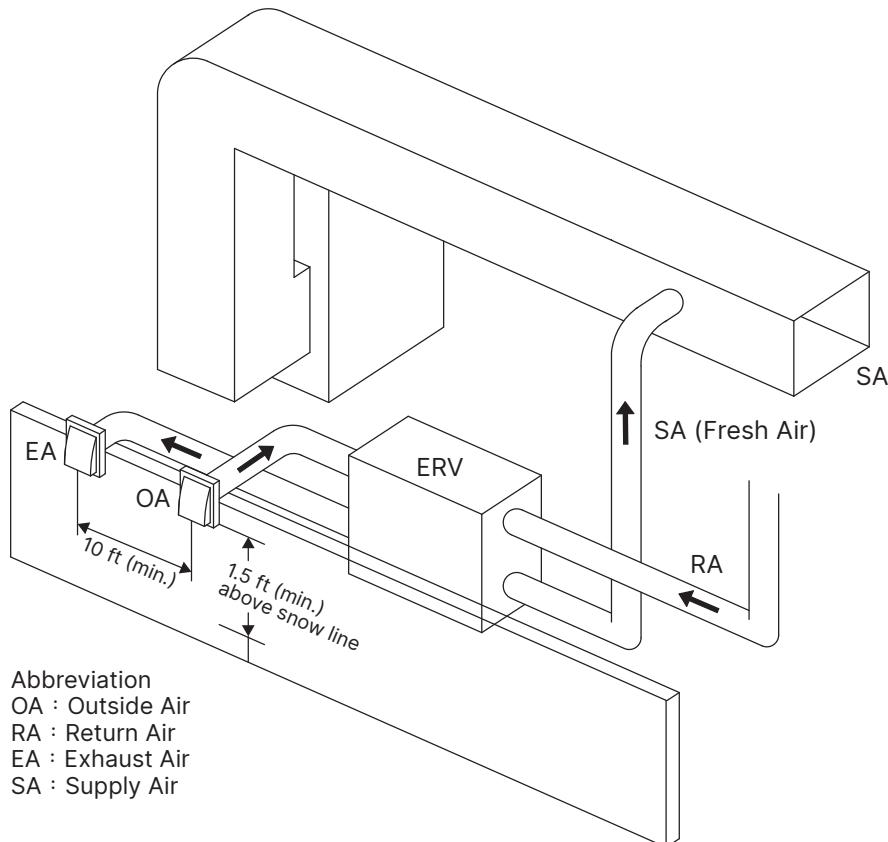

WIRING DIAGRAM

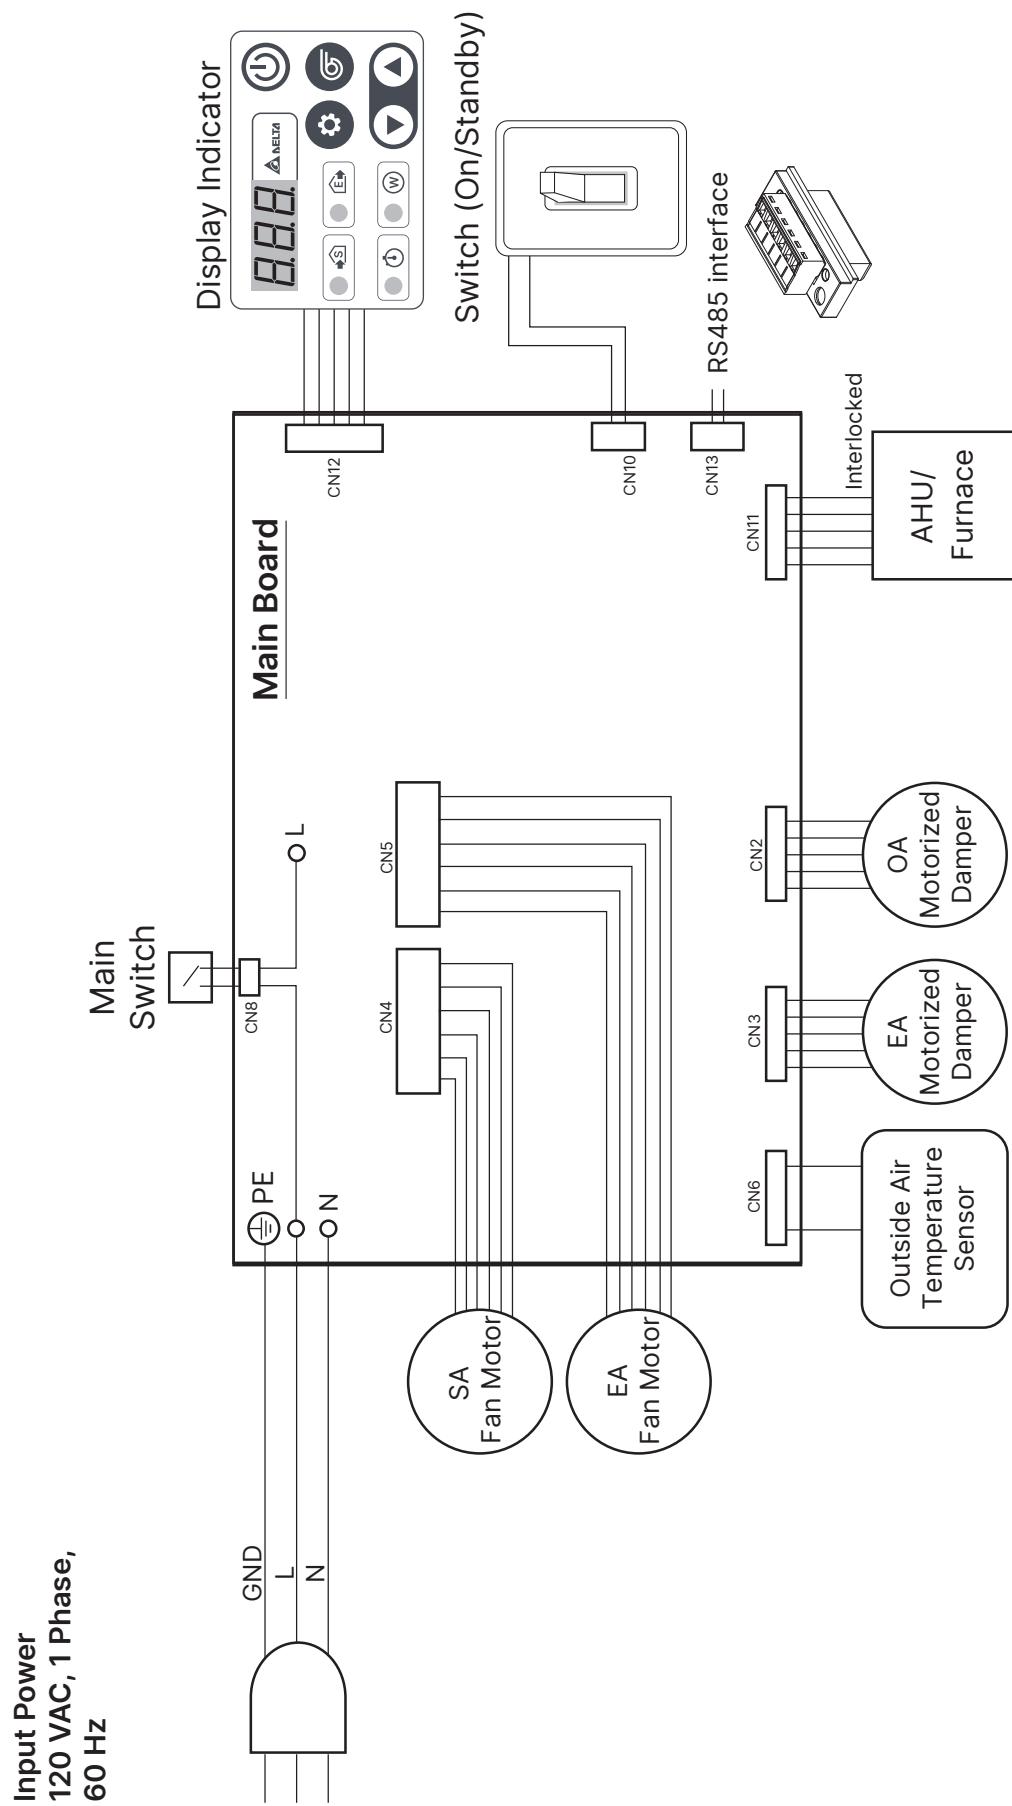

WIRING DIAGRAM

Suitable for VEB165S / VEB165S-R ERV model


Unit wiring: Use 4 wire AWG #20 (min.), 100 ft length (max.).

Interlock


Note: Run-time function is disabled when Y/W/G is enabled.

Synchronized: Start AHU/Furnace blower when
ERV is running

Not Synchronized: Start AHU/Furnace blower
not activated when ERV is running

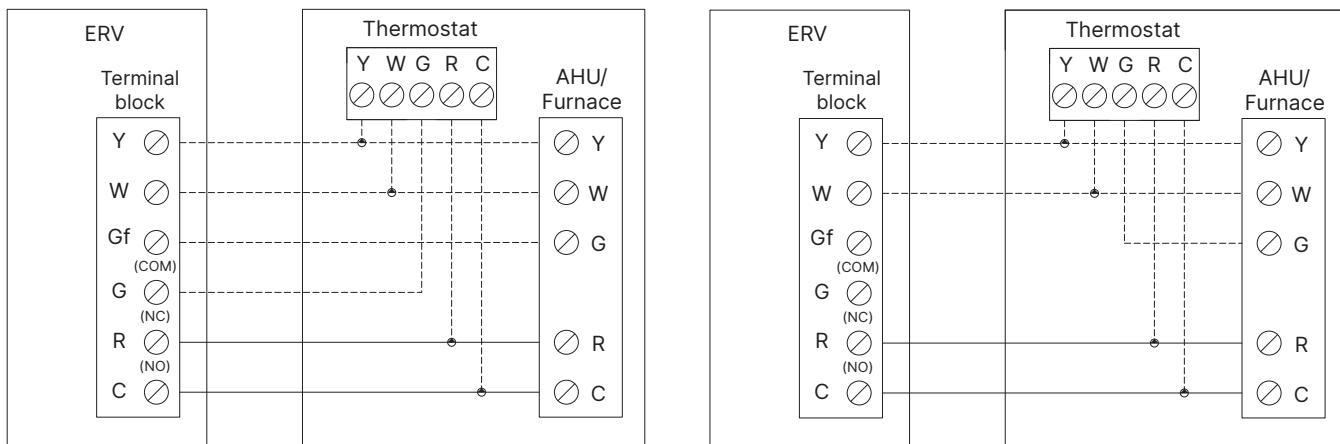

Wall switch

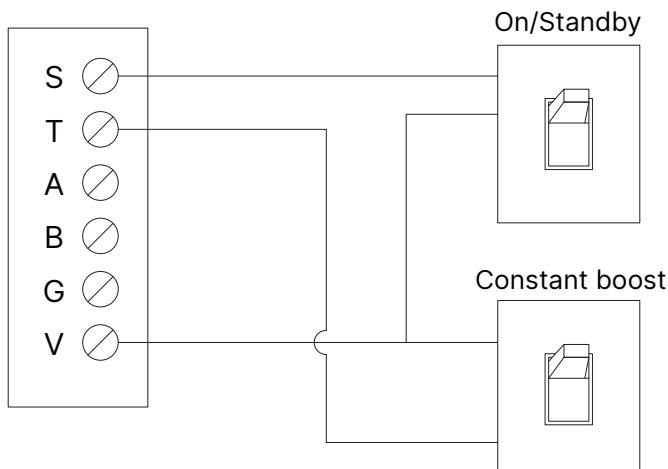


----- Mandatory Installation Wiring

----- Optional Installation Wiring

OPERATION


Follow the below step to operate the product.

1. Connect the control panel using AWG #20 (min.) wire, 100 ft length (max.). Refer to INSTALLATION (CONTROL PANEL) section.
2. Connect the wire of HVAC/ AHU signal connector and RS485 connector.
NOTE: No need to connect if you don't need this function.
3. Plug in the power cord (120V/60HZ)
Caution: Please ensure the maintenance door is closed before starting the product.
4. Turn on the main switch.

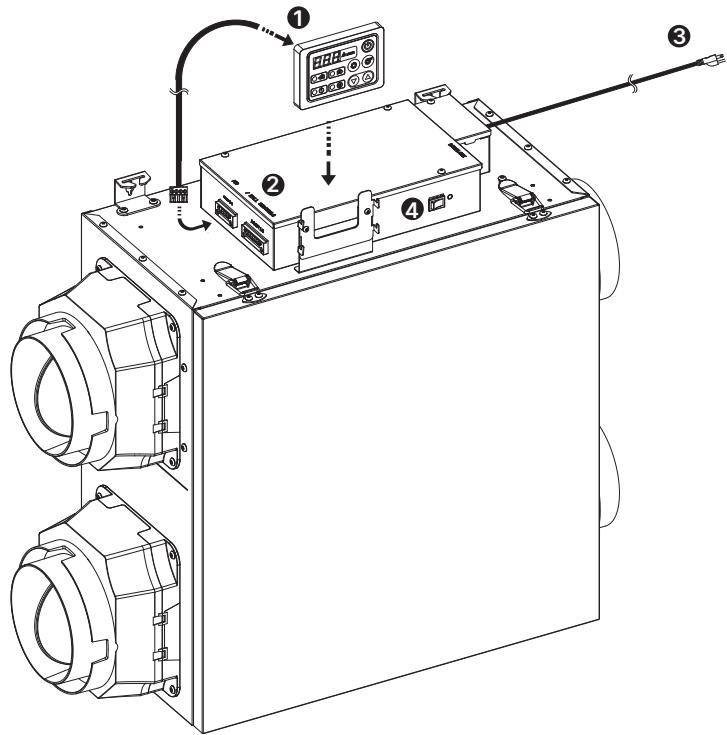


Hardwire connection method

1. Remove junction box cover and power cord.
2. Connect hardwire connector.
NOTE: Hardwire connector take out from inside accessory.
3. Connect the wires with wire nuts to the AC power supply. (120V/60Hz)
Caution: Please ensure the maintenance door and junction box cover is closed before starting the product.
4. Turn on the main switch.

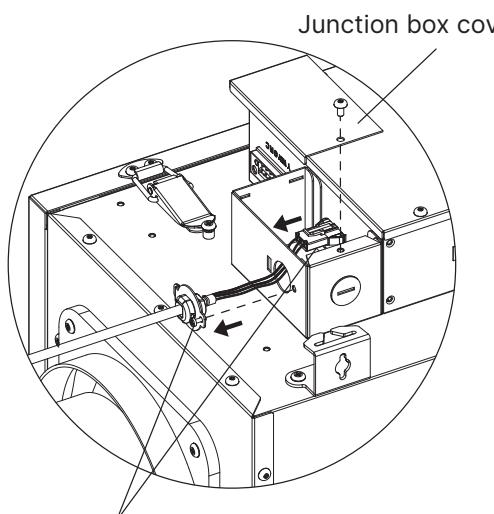

Remove power cord and wire fixed cover

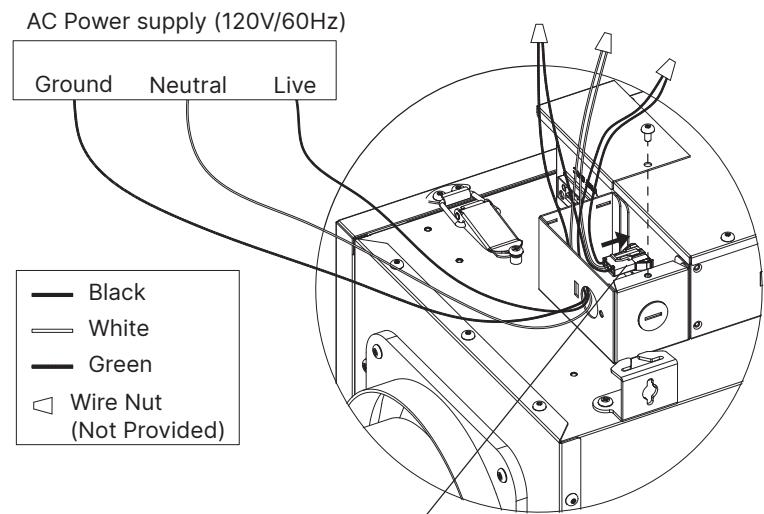


Connect hardwire connector
(Take hardwire connector out from Inside accessory kit)

INSTALLATION (CONTROL PANEL)

WIRING PREPARATION





Recommended to use the cable (AWG #14~#26), 2 ft (0.6 m) for connecting product and control panel, and the length should not be longer than 100 ft (30 m).

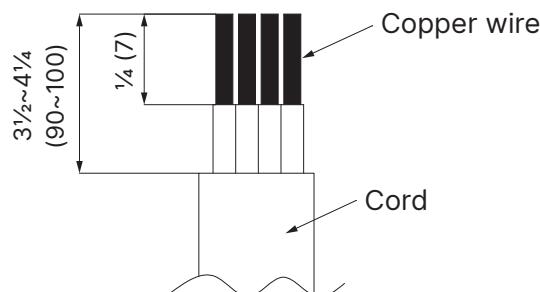

Note: Strip the insulation off 1/4" (7mm) each wire.
Unit: inches (mm)

WIRING DIAGRAM

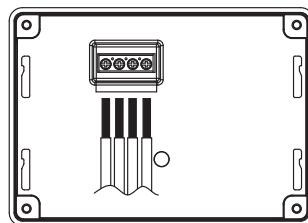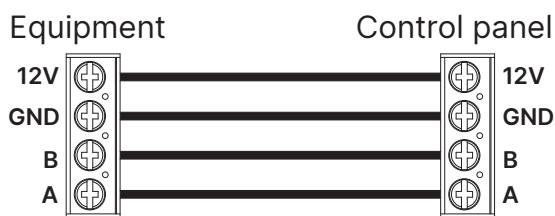


- ! Pressing hard on the LED display screen may cause distortion or breakage.
- ! Make sure wires are not caught behind the circuit board, as it may cause electrical leakage.

! Need to be tightened and not loosened.

Follow the below step to operate the product.


1. Use 2 pcs screws to secure the CONTROL PANEL BRACKET.
2. Control panel inserts into bracket groove.

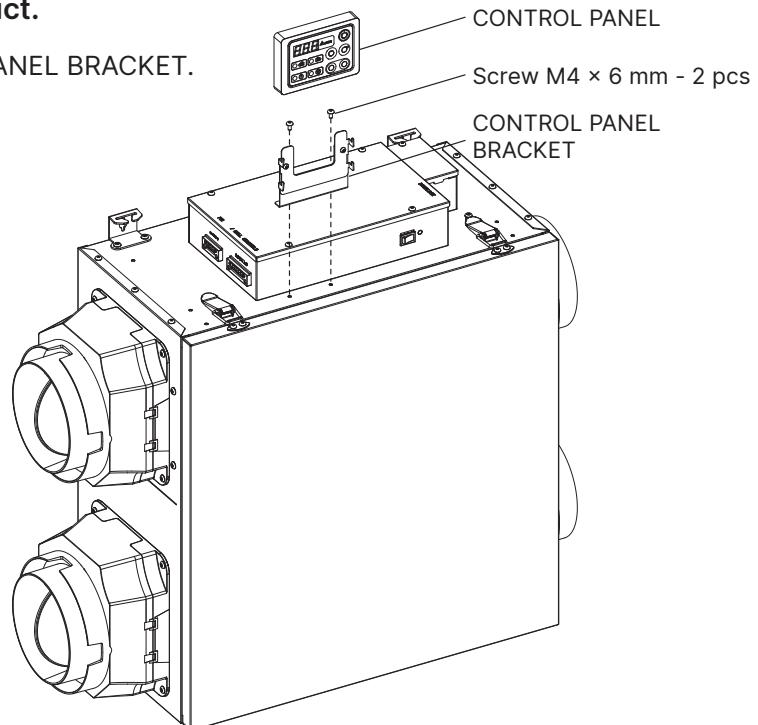


INSTALLATION (CONTROL PANEL)

Follow the below step to wall mounted the control panel.

1. Separate the CONTROL PANEL BRACKET A and B by remove 2 pcs screws.)

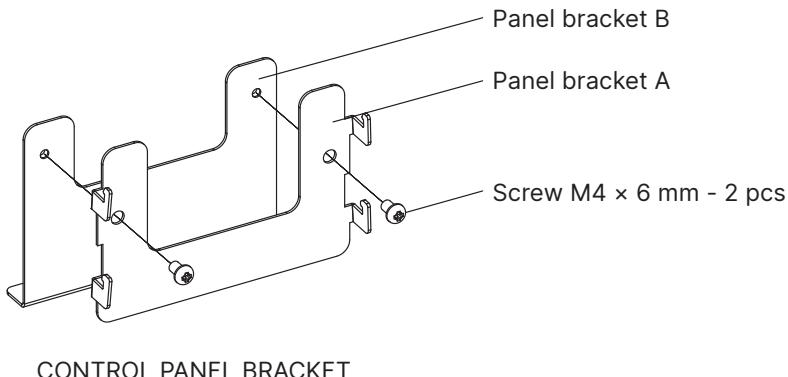


2. Drill both holes Ø3/16"(4.8mm) on the wall and insert the wall anchors.

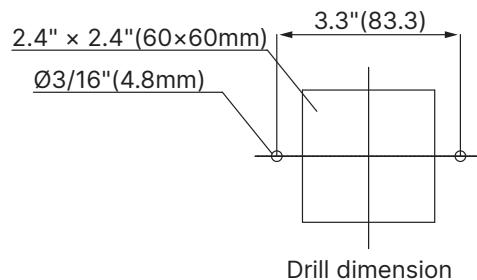

3. Panel bracket part A mounted on the wall by 2 pcs wall screws.


4. Cable wiring with control panel then insert into bracket groove.

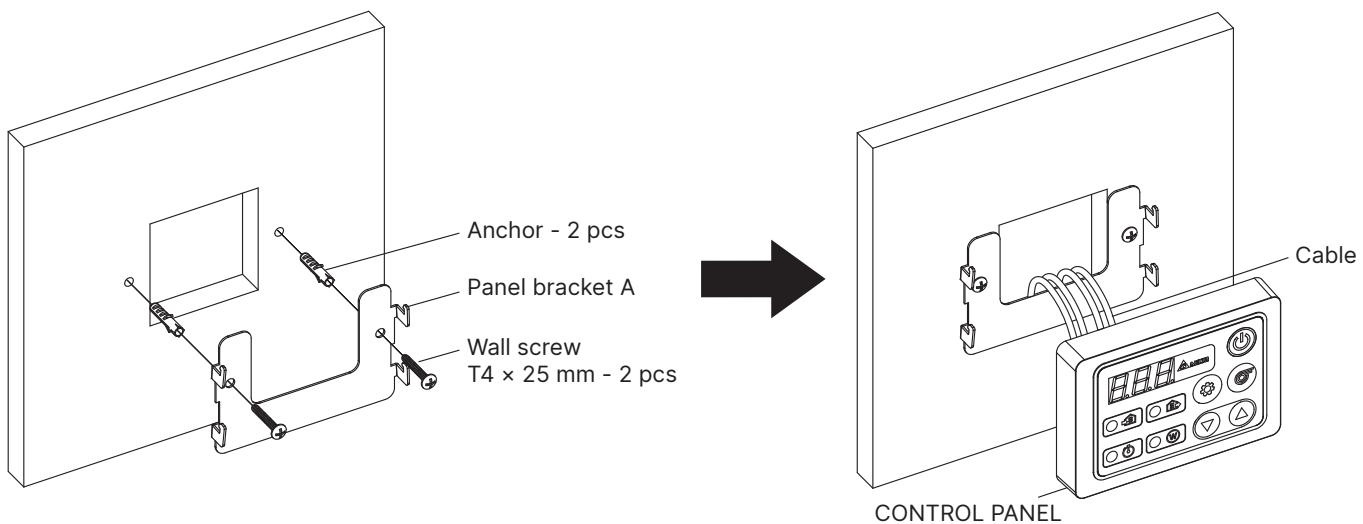

CONTROL PANEL

Note: All Delta ERV can be controlled by control panel.

The control offers the most advanced features to control your home's ventilation for complying with ventilation codes, including ASHRAE and California Title 24, Part 6 Sections 150.1(c)7A and 150.2(b)1E.

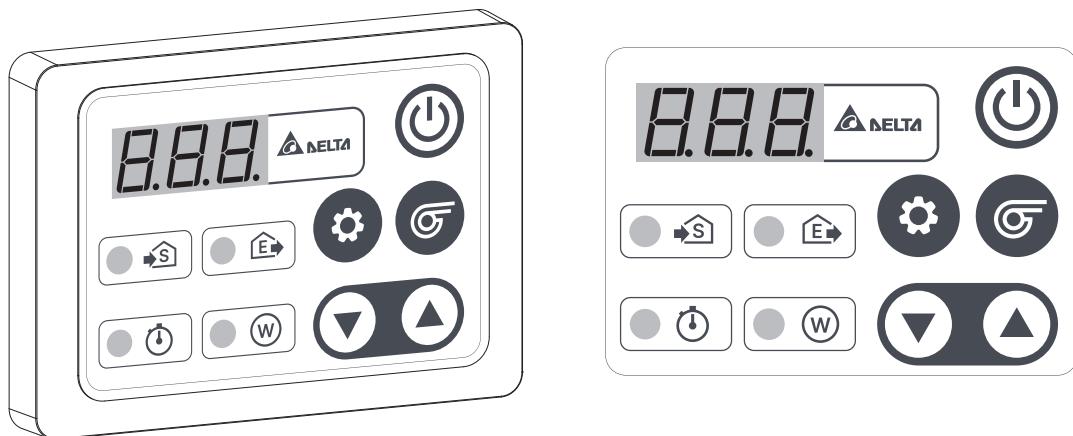

ICON	FUNCTION	DESCRIPTION
	Power on/off	Turn unit on and off by pressing this button.
	Boost mode	The airflow can be changed to maximum for 20/40/60 minutes one time. Press 1=20 min., press 2=40 min., press 3=60 min.
	Select and set	Select display function/Set airflow and run-time value.
	Adjust settings	Adjust the airflow and run-time value.
	Supply air indicator	If the indicator is illuminated, it is monitoring the supply airflow. If the indicator is flashing, supply airflow can be changed by using up/down button.
	Exhaust air indicator	If the indicator is illuminated, it is monitoring the exhaust airflow. If the indicator is flashing, exhaust airflow can be changed by using up/down button.
	Run-time indicator	If the indicator is illuminated, it is monitoring the run-time. If the indicator is flashing, run-time can be changed by up/down button to 5~60 minutes per hour. Use the run-time indicator to adjust air exchanges per hour and satisfy ASHRAE standard.
	Power consumption indicator	Monitoring the power consumption when the indicator is illuminated.
	7-Segment display	It shows setting values, monitoring values and default codes.


CONTROL PANEL - Continues

Tips for Settings




Power on/off

Press the button to turn the unit on/off.

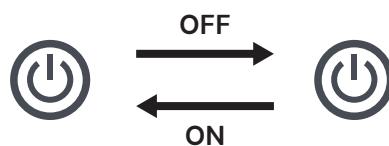


Boost on/off

Press button one time to increase to maximum flow rate for 20 min., press twice for 40 min., three times for 60 min., press and hold for over 3 seconds or four times to cancel boost mode.

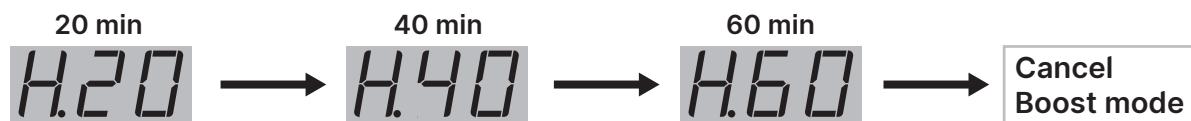


*Boost mode operation examples

Auto counting down from 40, 39, 38...3, 2, 1min until boost mode ends. After running 40 minutes, unit will return to previous status.

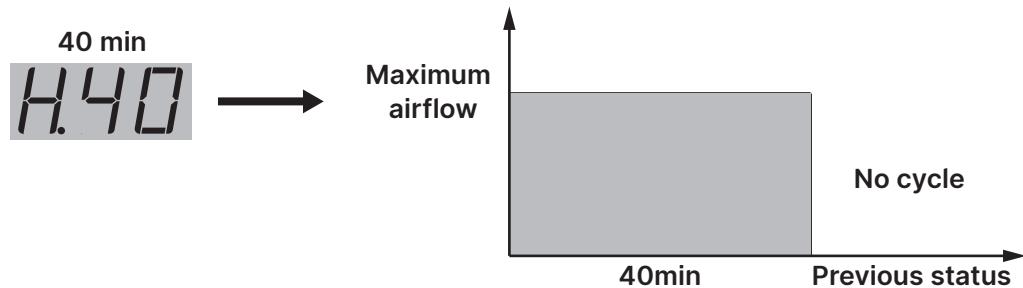

Select (cycling display)

Press button one time to select function as follows.

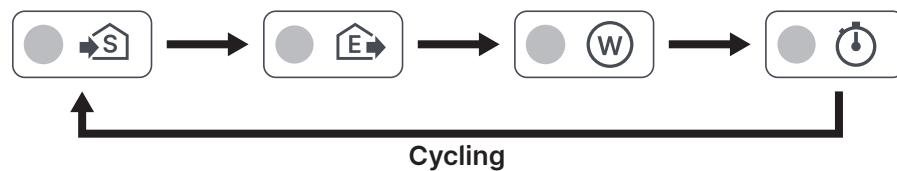

Lock / Unlock

Press on/off and select button 3 seconds at same time, up/down button and airflow/run-time will be locked. Press 3 seconds will be unlocked.

"LoC" means lock, "unL" means unlock.



CONTROL PANEL - Continues



Airflow

Press button to select airflow as follows.



Min. 30 CFM

30



Max. 165 CFM

165



Press up/down button one time to change 5 CFM. The range is 30~165 CFM.

Press to confirm or wait over 10 sec to auto save the setting.

*Operation examples

1. Monitoring airflow



165

Monitoring status "165" means 165 CFM.
The indicator is illuminated.

2. Setting airflow



100

Monitoring status "100" means 100 CFM.
Program CFM with up/down button.
The indicator is flashing.



Run-time

Press button to select run-time as follows.



t.05

t.60



Press up/down button one time to change 5 minutes.
The range is 5~60 minutes.

Press to confirm or wait over 10 sec to auto save the setting.

*Display Hints

t.40

Monitoring status "t" means run-time setting when indicator is flashing.

r.40

Monitoring status "r" means run-time currently when indicator is illuminated.


c.20

Monitoring status "c" means standby time currently when indicator is illuminated.


CONTROL PANEL - Continues

*Run-time operation examples

1. Run 40 minutes and standby 20 minutes setting

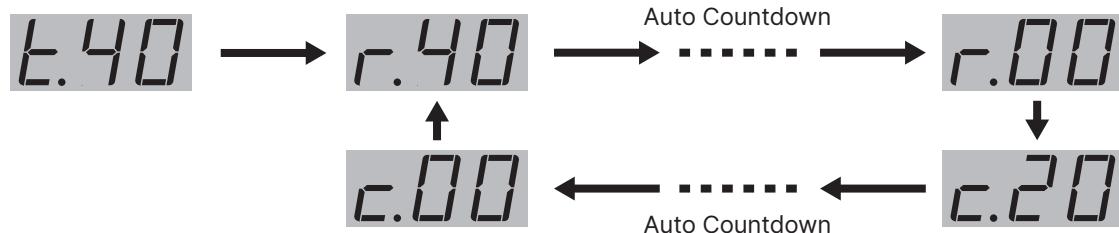

2. Run 60 minutes and standby 0 minutes setting (Continue operating setting)

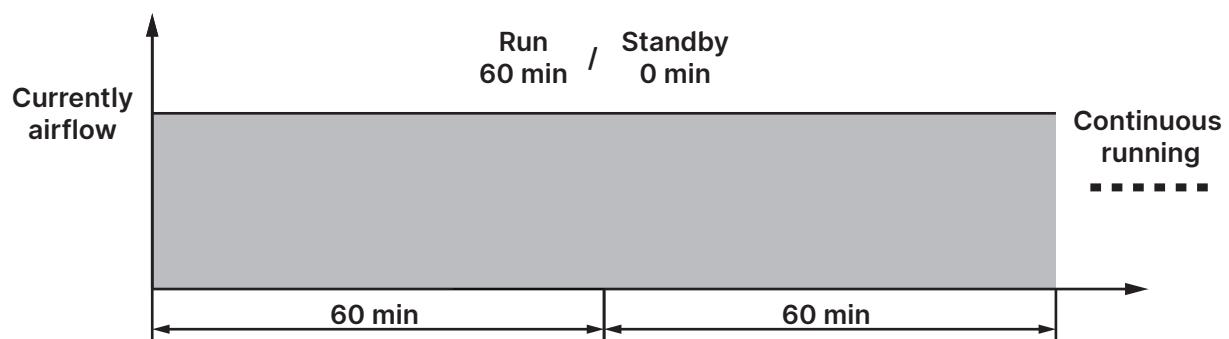

Defrost mode

Monitoring status "dEF" means the unit is in defrost mode when temperature drops below -10°C. (14°F).





dEF

MAINTENANCE

 WARNING	<p>To prevent electrical shock during maintenance, please stop the unit and unplugging it. Always wear protective gloves and glasses when performing maintenance and repairs.</p>
CAUTION	<ol style="list-style-type: none"> 1. For long-term and safe use of the product, routine maintenance must be done by authorized person(s) at least every 6~12 months. 2. Pay attention to dust, condensation water or parts which may drop down when the door is opened. 3. Do not allow water to enter the product. 4. Never use petrol, benzene, thinner or any other such chemicals for cleaning the product.

Filter cleaning and replacing

1. Open the Maintenance Door.
2. Remove the OA Pre-filter, MERV 13 filter and RA Pre-filter.
3. Clean the filters with a vacuum cleaner, then reinstall.
4. Close the Maintenance Door.

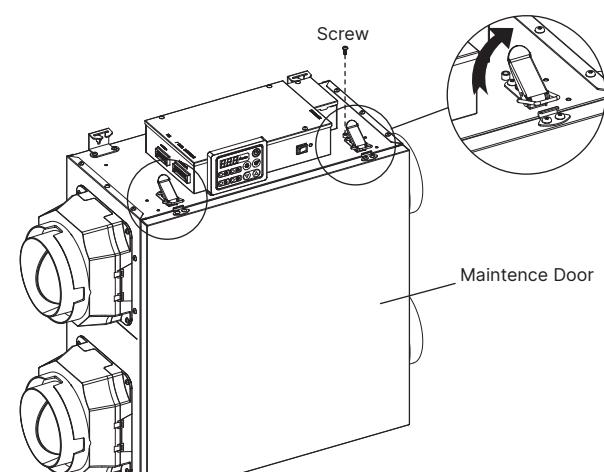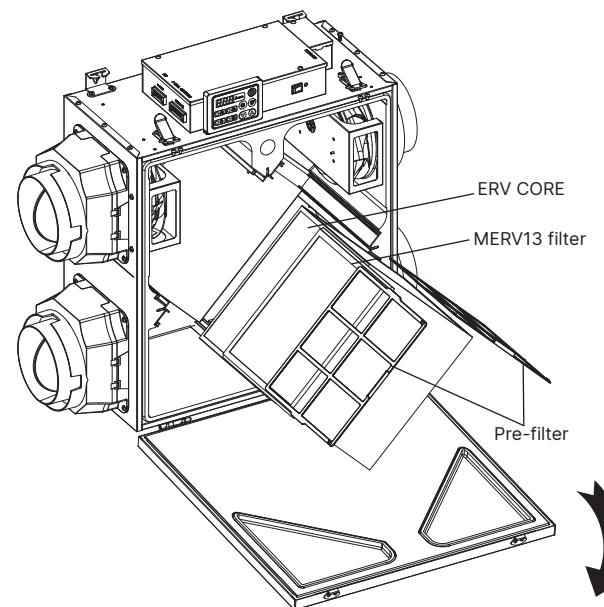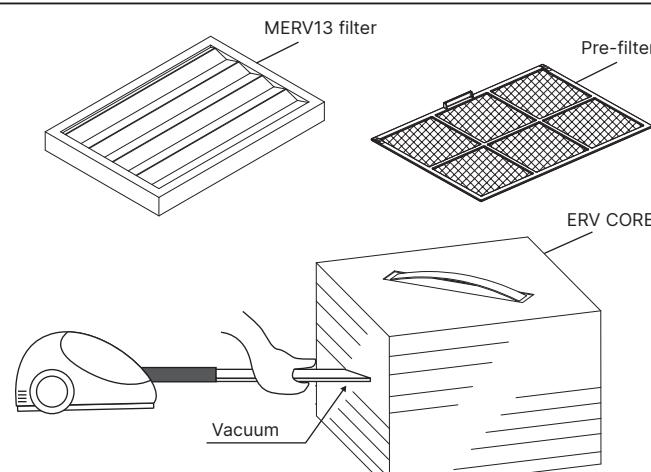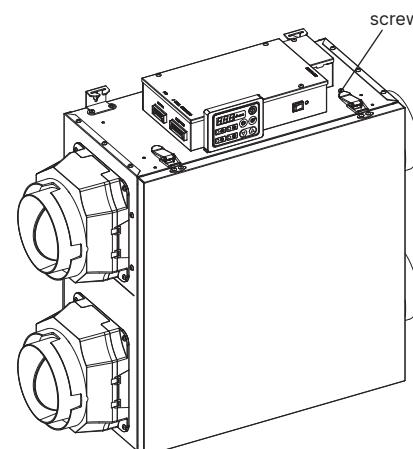 <p>(1) Open the Maintenance Door.</p>	 <p>(2) Remove the ERV core and filter.</p>
 <p>(3) Clean ERV core and filters with a vacuum cleaner, then reinstall.</p>	 <p>(4) Close the Maintenance Door.</p>

MAINTENANCE - Continues


Filter maintenance reminder

The display will show "F01" when the product accumulated running time reaches 3 months and show "F02" when the product accumulated running time reaches 6 months. Press "up and down" buttons simultaneously for 2 seconds to erase the error code. If running time reaches 6 months, reset the timer.


To reset the timer, press "up and down" simultaneously for 5 seconds, display will show "F00".

Operating as below:


- **Erase the 3 months reminder**

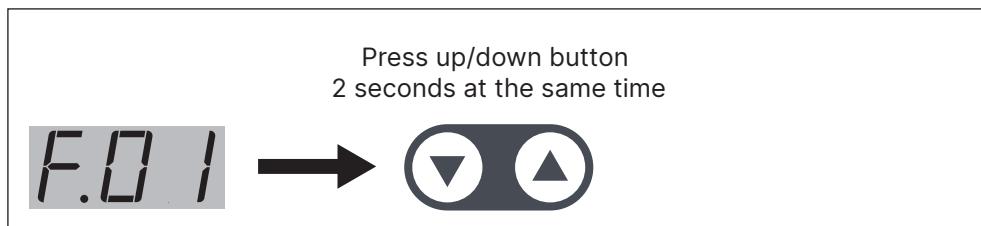

- **Reset the 6 months reminder**

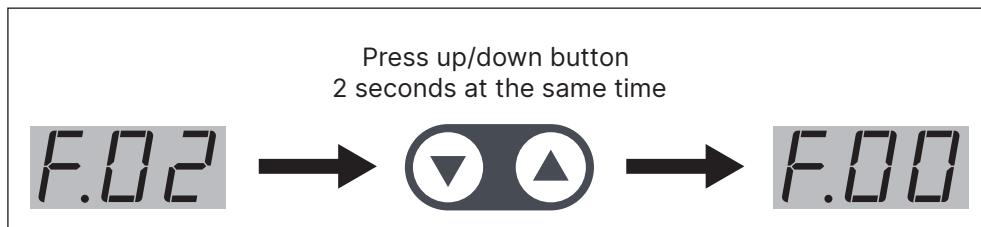

- **Forced to zero the time reminder**

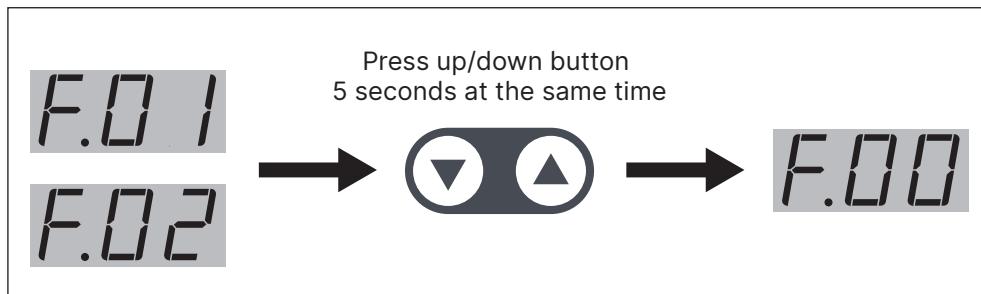

Note: The Unit can still be operated when reminder is displayed, but it is recommended to replace filter as soon as possible.

TROUBLE SHOOTING

Problem	Possible reason	Action
The ERV doesn't work	<ul style="list-style-type: none"> • Is the power cord connected to the ERV? • Is the power cord connected to circuit breaker of electric panel? • Is the ERV connected to the main switch? 	<ul style="list-style-type: none"> • Check if the power cord is connected. • Check that the circuit breaker is for unit only. • Circuit breaker must have a capacity of 10A or more. • If the power is off, turn power back on.
Abnormal sound or vibration	<ul style="list-style-type: none"> • Is ERV installed correctly? • Is duct installed properly? • Is there any air leakage? 	<ul style="list-style-type: none"> • Make sure ERV is horizontal and fixed. • Follow the ductwork installation instruction section. • Do not over-bend air duct. Make ducts straight. • Check that all ducts are being sealed up tight
Airflow is reduced	<ul style="list-style-type: none"> • Filter blockage 	<ul style="list-style-type: none"> • Clean the filter with vacuum. (Do not wash with water) • Replace the MERV13 filter.

FAULT INDICATOR DISPLAY(FID)

Code #	Descriptions
F00	Reset filter maintenance timer
F01	Clean two primary filters and replace MERV 13 filter via operating days
F02	Maintain two primary filters and MERV 13 Filter via operating days
E01	Supply airflow abnormal
E02	Exhaust airflow abnormal
E03	Temperature sensor failure
E04	Temperature too high / Low
E05	Communication error

WARRANTY

DELTA ELECTRONICS FIVE YEAR LIMITED WARRANTY

Delta Electronics Inc. ("Delta Electronics") warrants to the original consumer purchaser in the USA that the Breez ventilation fan products will be free from defects in material or workmanship. This warranty is limited to FIVE (5) years from the original date of purchase.

Limitations and Exclusions

1. During the warranty period, a replacement for any defective product will be supplied free of charge for installation by the consumer. The warranty provided herein does not cover charges for labor or other costs incurred in the troubleshooting, repair, removal, and installation service.
2. All returns of defective parts or products must include the product model number, and must be made through an authorized Delta Electronics distributor. Authorized returns must be shipped prepaid. Repaired or replacement products will be shipped by Delta Electronics F.O.B. shipping point.
3. Delta Electronics shall not be liable for any indirect, incidental, consequential, punitive, or special damages arising out of or in connection with products use or performance, regardless of the form of action whether in contract, tort (including negligence), strict product liability or otherwise.
4. The warranty does not cover if user does not comply with manufacturer's installation manual.
5. To qualify for warranty service, you must notify Delta Electronics at the address or telephone number below.
6. Delta Electronics shall have no liability to the original owner-user with respect to any defect caused by abuse, misuse, neglect, improper transportation or storage, improper testing, improper installation, improper operation, improper use, improper maintenance, improper repair, improper alteration, improper modification, tampering or accident of products or parts thereof, or unusual deterioration or degradation of products or parts thereof due to a physical environment beyond the requirements of products' specifications.

Address: 46101 Fremont Boulevard, Fremont, CA 94538

US Toll Free Number:

1-888-979-9889 – Technical Support

1-877-685-4384 – Customer Sales Support

www.deltabreez.com



501627320002