


# VENTILATION FAN / LED LIGHT

MODEL 50F-LED/80F-LED

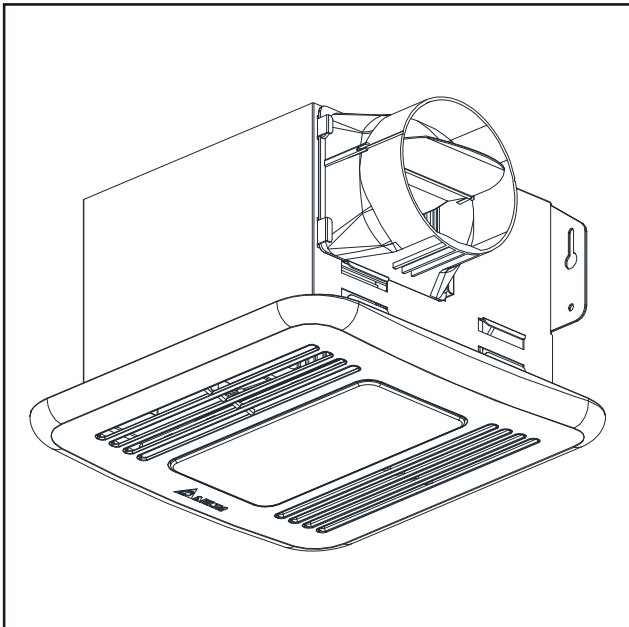

## TABLE OF CONTENTS

Package Contents	2
General Safety Information	3
Preparation	4
Assembly Instructions	5
New Construction	5
Existing Construction	6
Grille Installation	8
Operation	8
Care and Maintenance	9
Troubleshooting	10
Dimensions	11
Product Specifications	11
Warranty	12

## READ AND SAVE THESE INSTRUCTIONS




Address: 46101 Fremont Boulevard, Fremont, CA 94538

US Toll Free Number: 1-888-979-9889

[www.deltabreez.com](http://www.deltabreez.com)

MFG MODEL  
VFB050B4LED1 / VFB080B4LED1

## PACKAGE CONTENTS

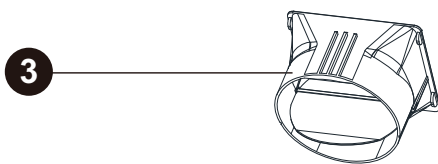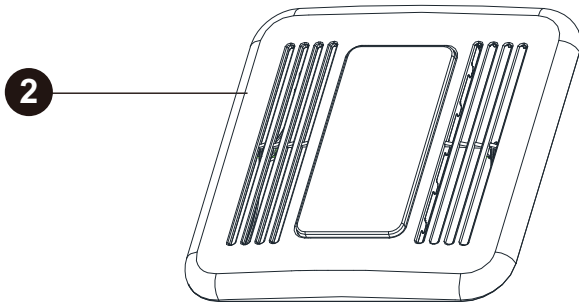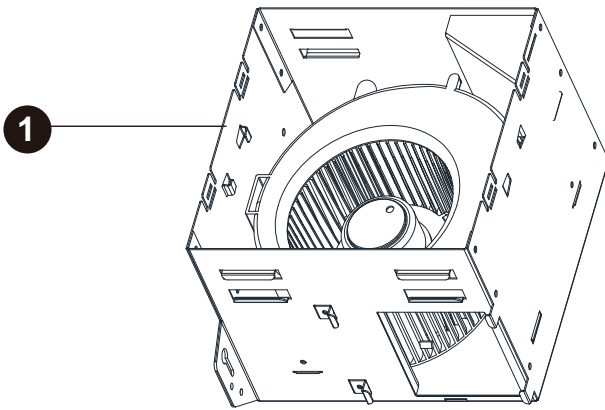

PART	DESCRIPTION	QTY
1	Fan Body	1
2	Grille	1
3	Duct Connector	1

## GENERAL SAFETY INFORMATION

### READ AND SAVE THESE INSTRUCTIONS GENERAL SAFETY INFORMATION

1. Make sure that the electric service supply voltage is AC 120V, 60Hz.
2. Follow all local electrical and safety codes, as well as the National Electrical Code (NEC) and the Occupational Safety and Health Act (OSH Act).
3. Always disconnect the power source before working on or near the ventilating fan, motor or junction box.
4. Protect the power cord from sharp edges, oil, grease, hot surfaces, chemicals or other objects.
5. Do not kink the power cord.
6. Do not install the unit where ducts are configured as shown in Fig.A.
7. Provide suction parts with proper ventilation.
8. This unit is UL Listed for use over a bathtub or shower when installed in a GFCI protected branch circuit.

### WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

1. Use this unit only in the manner intended by the manufacturer. If you have questions, contact the manufacturer.
2. Before servicing or cleaning the unit, switch the power off at the service panel and lock the service disconnecting means to prevent the power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.
3. Installation work and electrical wiring must be done by a qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
4. Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent backdrafting. Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating Refrigeration and Air Conditioning Engineers (ASHRAE) and local code authorities.
5. When cutting or drilling into the ceiling, do not damage electrical wiring and other hidden utilities.
6. Ducted fans must always be vented to the outdoors.

7. If this unit is to be installed over a tub or shower, it must be marked as appropriate for the application and be connected to a GFCI (Ground Fault Circuit Interrupter) – protected branch circuit.
8. Do not use this unit with any other solid-state control device. Solid-state controls may cause harmonic distortion, which can cause a motor humming noise.
9. NEVER place a switch where it can be reached from a tub or shower.
10. Not to be installed in a ceiling thermally insulated to a value greater than R40. (This is required for installation in Canada only).

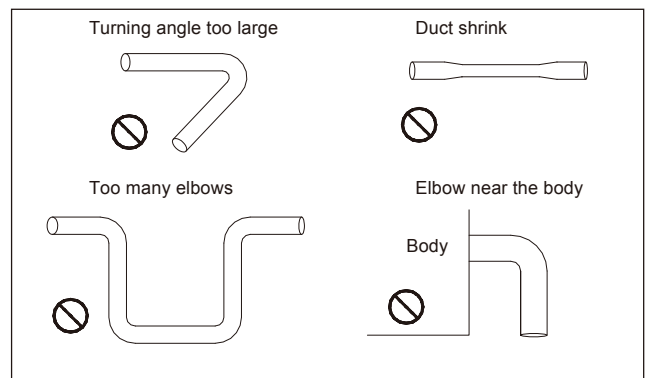


Fig. A

### CAUTION

1. For general ventilating use only. Do not use to exhaust hazardous or explosive materials and vapors.
2. Not for use in cooking areas. (Fig.B)
3. This product must properly connect to the grounding conductor of the supply circuit.
4. To reduce the risk of injury to persons, install the fan at least 8.2 feet (2.5m) above the floor.

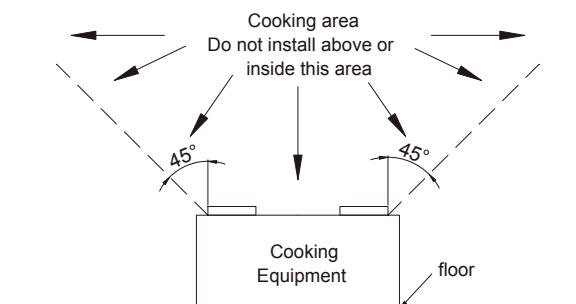


Fig. B

## PREPARATION

Tools Required for Assembly (not included): Hammer, Flathead Screwdriver, Wire Nuts, Nails, Duct Tape, Phillips Head Screwdriver, Utility Knife

Helpful Tools (not included): Electric Drill, Drill Bits

**WARNING: Turn off electricity at breaker box before beginning installation.**



- Carefully remove unit from carton.
- Check area above installation location to be sure that wiring can run to the planned location and that duct work can be run. Make sure the area is sufficient for proper ventilation.
- Inspect duct work and wiring before proceeding with installation.
- Before installation, provide inspection and future maintenance access at a location that will not interfere with installation work.
- You may need the help of a second person to install this fan: one person on the attic side and one on the room side.

Note: Installations may vary depending on how the previous bath fan was installed. Supplies necessary for the installation of your bath fan are not all included. However, most are available at your local home improvement or hardware store.


## DIMENSION REQUIREMENTS

Ceiling Opening (L)	Ceiling Opening (W)	Ceiling Opening (H)
7 1/2 in.	7 1/4 in.	5 3/4 in.

## WIRING DIAGRAM

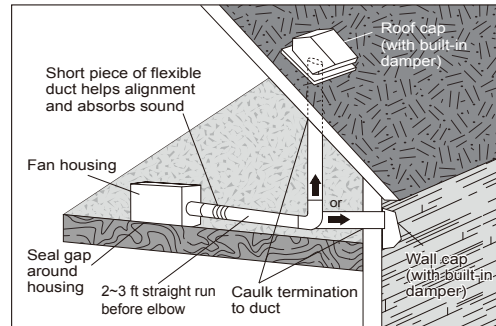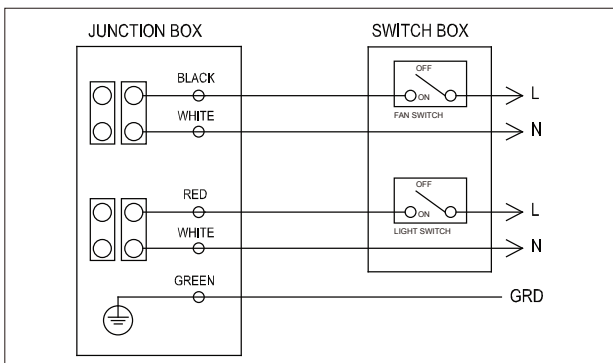

- Proper insulation around the fan to minimize building heat loss and gain. 4" circular duct is recommended for installation. The ducting from this fan to the outside of the building has a strong effect on the air flow, noise and energy use of the fan. Use the shortest, straightest duct routing possible for best performance, and avoid installing the fan with smaller ducts than recommended. Insulation around the ducts can reduce energy loss and inhibit mold growth. Fans installed with existing ducts may not achieve their rated air flow.
- The fan will operate most efficiently when located where the shortest possible duct run and minimum of elbows will be needed.
- Use a roof cap or wall cap that has a built-in damper to reduce backdrafts.
- External timer/dimmer switch can be used please contact Delta Breez customer service and consult with a licensed electrician for compatibility.

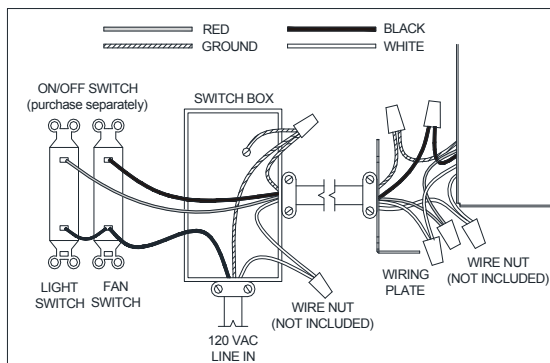


## ASSEMBLY INSTRUCTIONS


### NEW CONSTRUCTION

Turn off power source. Review all safety precautions.


1. Attach the Duct Connector ③ to the Fan Body ①

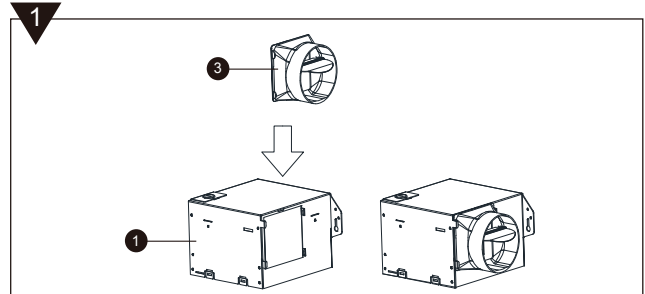


2. Remove the wiring box cover from the Fan Body ① .  
Remove the wiring knockout from the wiring box cover with a flathead screwdriver (not included).

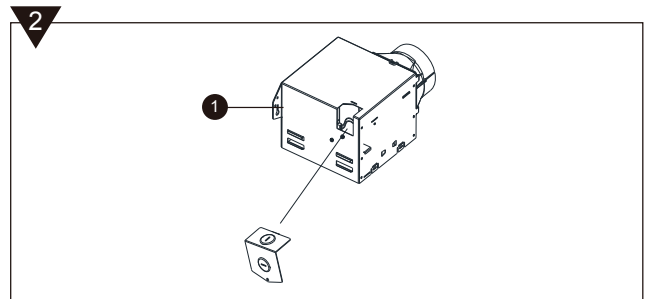


3. Place the Fan Body ① next to a ceiling joist.  
The fan body should be level and perpendicular to the joist.

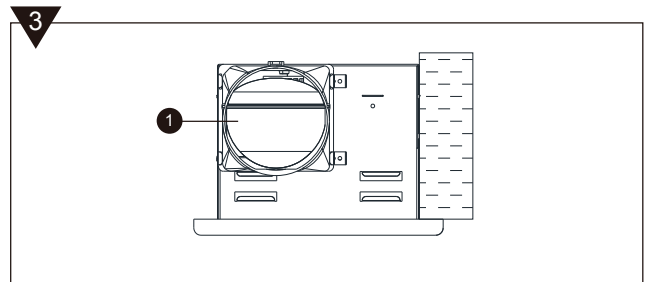

4. Mount the Fan Body ① to the joist using nails (not included) where indicated.

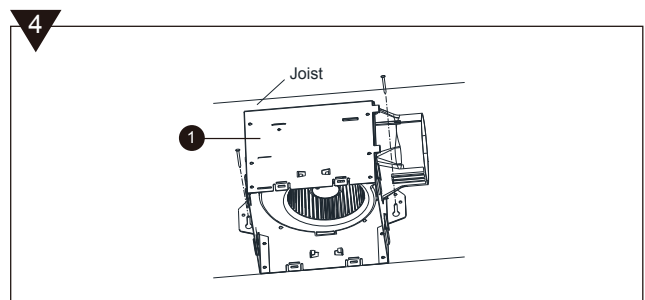


5. Pull the wire through the hole and into the junction box(not included), secure 120VAC house wiring from the wall diagram on page4. 14AWG is the smallest conductor that shall be used for branch-circuit wiring.  
Push the wires back through the hole. Reattach the wiring box cover.

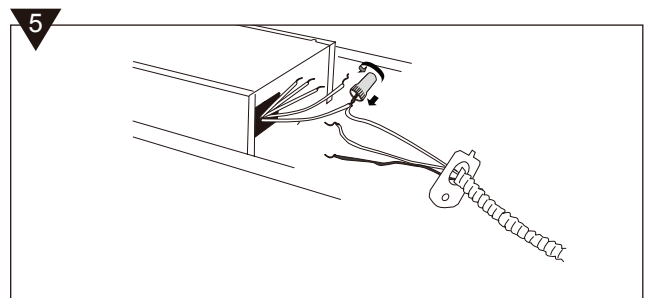

## ASSEMBLY INSTRUCTIONS


6. Install a circular 4 in. duct (not included) and secure it with duct tape or clamps (neither included). Finish ceiling work. The ceiling hole should be aligned with the edge of the Fan Body **1**.

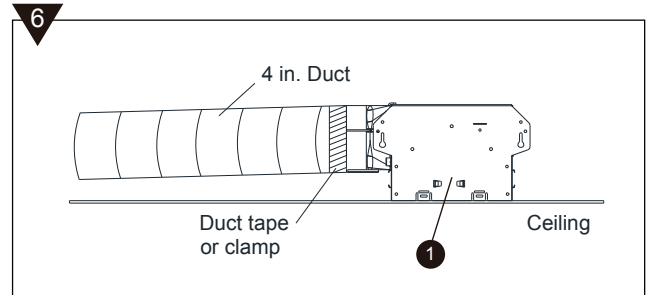


### EXISTING CONSTRUCTION

Turn off power source. Review all safety precautions.


1. Remove existing fan.

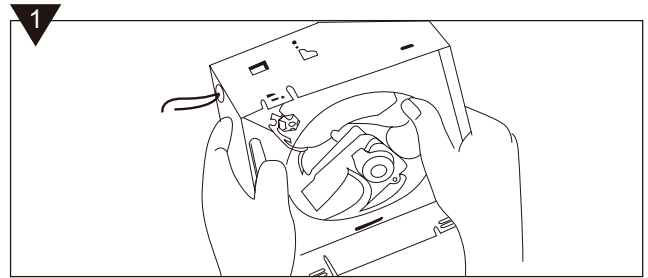


2. Measure the opening to ensure it is large enough to accommodate the new Fan Body (7 1/2 in. x 7 1/4 in.). Note: 7 1/4 inch side of opening should be flush with the joist.

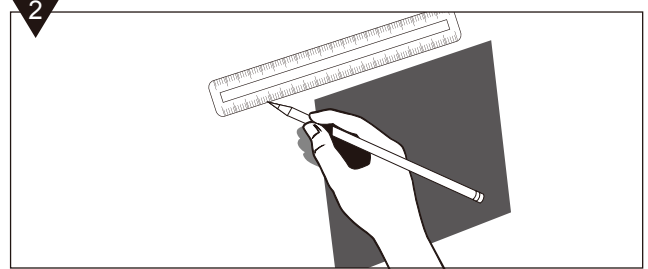

3. If this fan is not replacing an old fan, be sure to cut a 7 1/2 in. x 7 1/4 in. opening for the Fan Body **1**. Make sure the 7 1/4 inch side of opening is flush with the joist for installation from below.

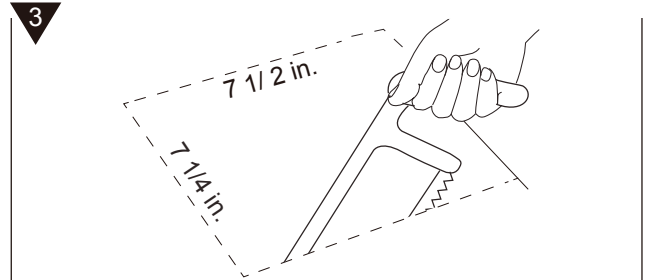


4. Attach the Duct Connector **3** to the Fan Body **1**.

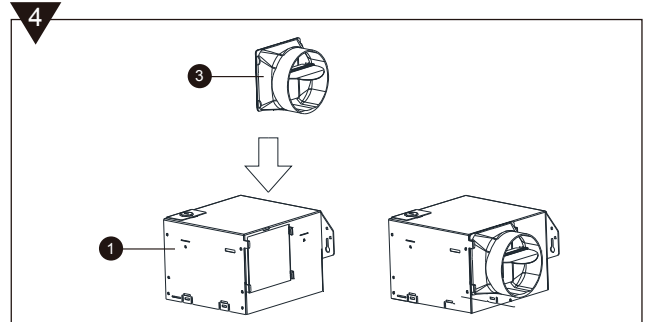


## ASSEMBLY INSTRUCTIONS


5. Remove the wiring box cover from the Fan Body ❶ . Remove the wiring knockout from the wiring box cover with a flathead screwdriver (not included).

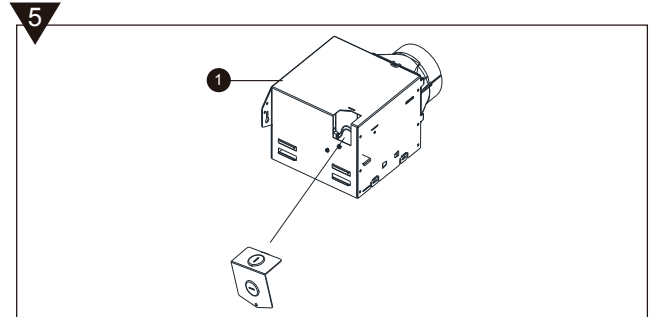


6. Remove the three screws that hold the fan motor assembly in place. Remove the fan motor assembly from the Fan Body ❶ . Unplug fan connector.

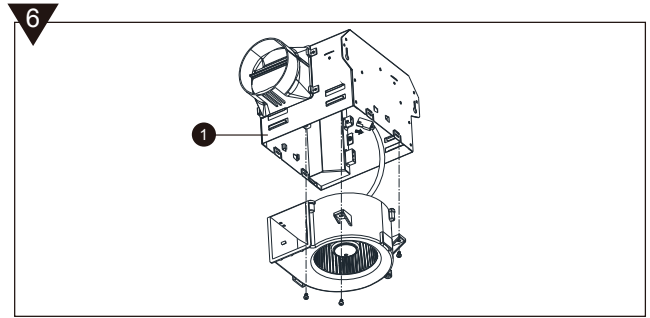


7. Pull the wire through the hole and into the junction box(not included), secure 120VAC house wiring from the wall diagram on page4. 14AWG is the smallest conductor that shall be used for branch-circuit wiring. Push the wires back through the hole. Reattach the wiring box cover.

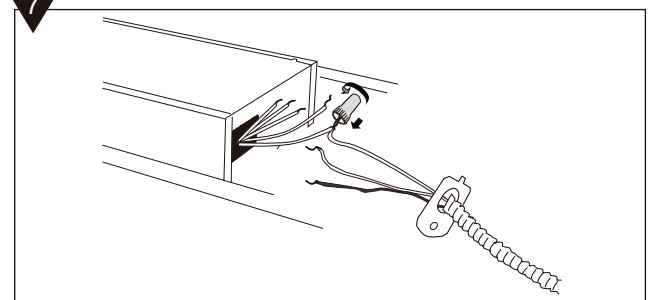

8. Install a circular 4 in. duct (not included) and secure it with duct tape or clamps (neither included). Mount the Fan Body ❶ to the joist using nails (not included) were indicated.

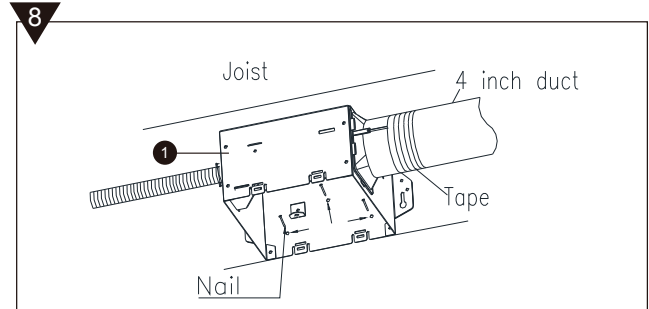

9. Plug the fan assembly back into the Fan Body ❶ . Reattach the fan assembly using the three screws. Plug fan connector.

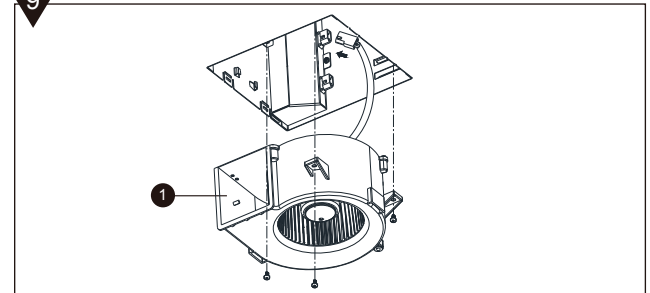


## GRILLE INSTALLATION

Insert the LED light connector into the fan body.

Pinch the mounting springs on the Grille ❷, and insert them into the narrow rectangular slots inside the fan.

Push the Grille ❷ up toward the ceiling.


Turn on electricity at the breaker box after finishing installation.

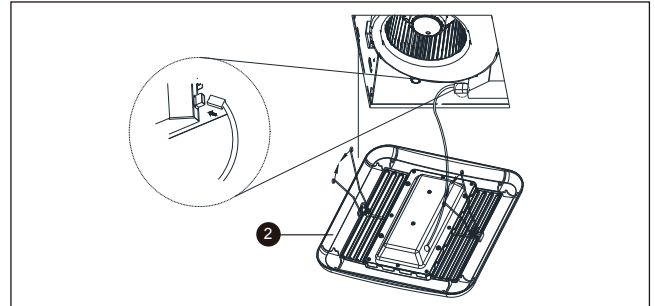


## FAN / LED LIGHT OPERATION

### Operation

Fan mode: Turn the Fan switch to operate ON/OFF of Fan function.

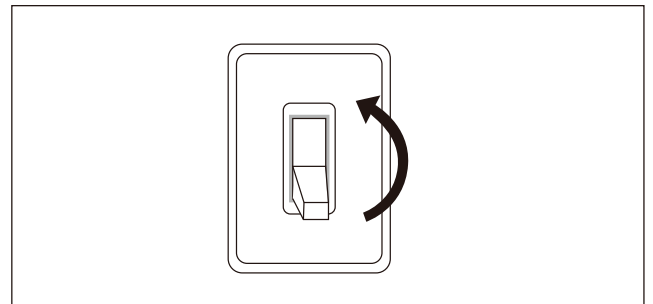

Light mode: Turn the Light switch to operate ON/OFF of LED lighting function.

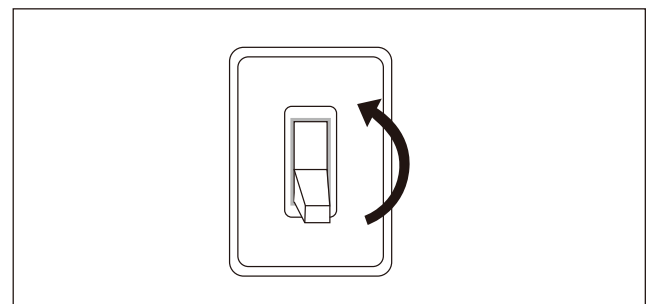




## CARE AND MAINTENANCE

See safety information before proceeding. Routine maintenance should be done at least once a year.


- Never use solvents, thinner or harsh chemicals when cleaning the fan.
- Do not allow water to enter the motor.
- Do not immerse metal parts in water.
- Do not immerse resin parts in water over 140° Fahrenheit.
- Do not immerse LED module in water.

Turn off power source. Review all safety precautions.


1. To remove grille ②, squeeze springs and pull down.

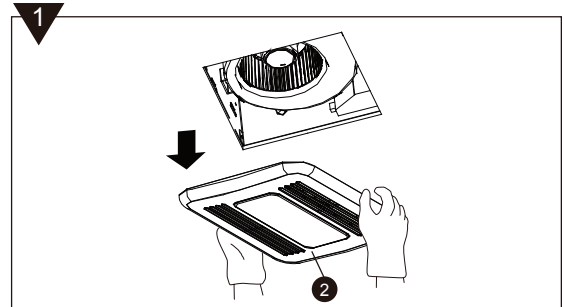


2. Wash and clean the grille ② in a sink and dry with a cloth.

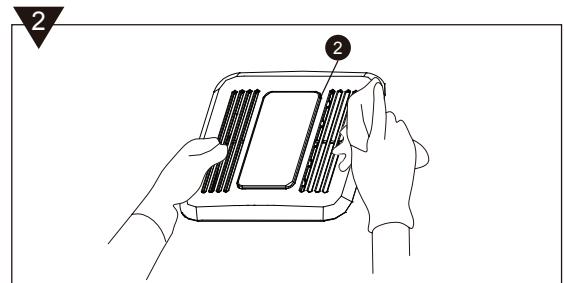

3. Remove dust and dirt from the fan body ① with a vacuum cleaner.

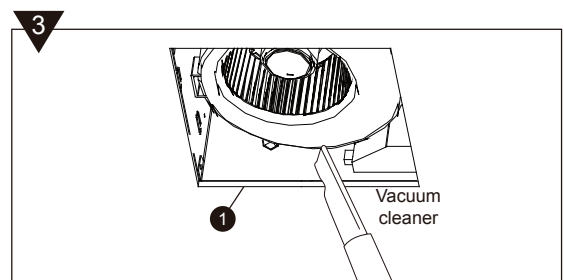


4. Dampen cloth with dust detergent and wipe the fan body ①. Then wipe dry with a clean cloth.

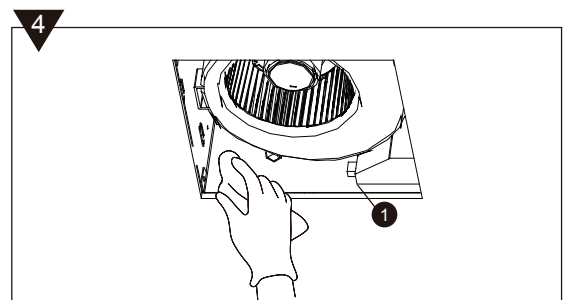

5. Replace grille ② back onto fan body ①.


6. Turn on power source to operate fan again.

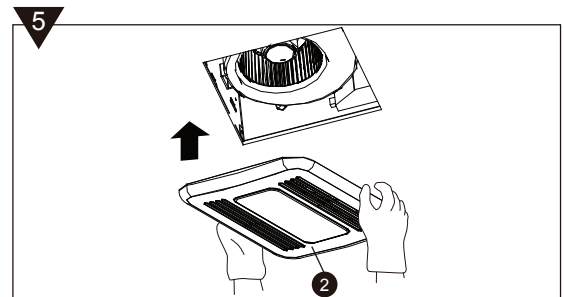

## TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
The fan is not turning on	<ol style="list-style-type: none"> <li>1. Power off</li> <li>2. Faulty switch</li> <li>3. Faulty wire connection</li> </ol>	<ol style="list-style-type: none"> <li>1. Make sure power supply is on.</li> <li>2. Test or replace switch.</li> <li>3. Check wire in switch box.</li> </ol>
The fan seems louder than it should	<ol style="list-style-type: none"> <li>1. CFM too great</li> <li>2. Damper not working properly or damaged</li> <li>3. Bend in duct too close to fan discharge</li> <li>4. Fan discharge reduced to fit smaller duct</li> <li>5. Fan body not securely attached</li> </ol>	<ol style="list-style-type: none"> <li>1. Be sure the CFM rating on the fan matches the size of your room.</li> <li>2. Check damper to ensure it is opening and closing properly. If the damper has become damaged, please call Customer Service.</li> <li>3. Be sure you do not have any sharp bends in duct closer than 18 in. to the fan discharge.</li> <li>4. Use recommended size ducting to reduce fan noise.</li> <li>5. Be sure the fan is securely attached to your ceiling joists.</li> </ol>
The fan is not clearing the room	<ol style="list-style-type: none"> <li>1. Insufficient intake airflow within room</li> <li>2. Insufficient CFM</li> </ol>	<ol style="list-style-type: none"> <li>1. Be sure a door or window is slightly ajar or opened to allow airflow. The fan is not able to draw air out of the room without enough airflow to draw in from.</li> <li>2. Be sure the CFM rating on the fan matches the requirements for your room size.</li> </ol>
The light is not turning on	<ol style="list-style-type: none"> <li>1. Power off</li> <li>2. Faulty switch</li> <li>3. Faulty wire connection</li> </ol>	<ol style="list-style-type: none"> <li>1. Make sure power supply is on.</li> <li>2. Test or replace switch.</li> <li>3. Check wire in switch box.</li> </ol>

## DIMENSIONS

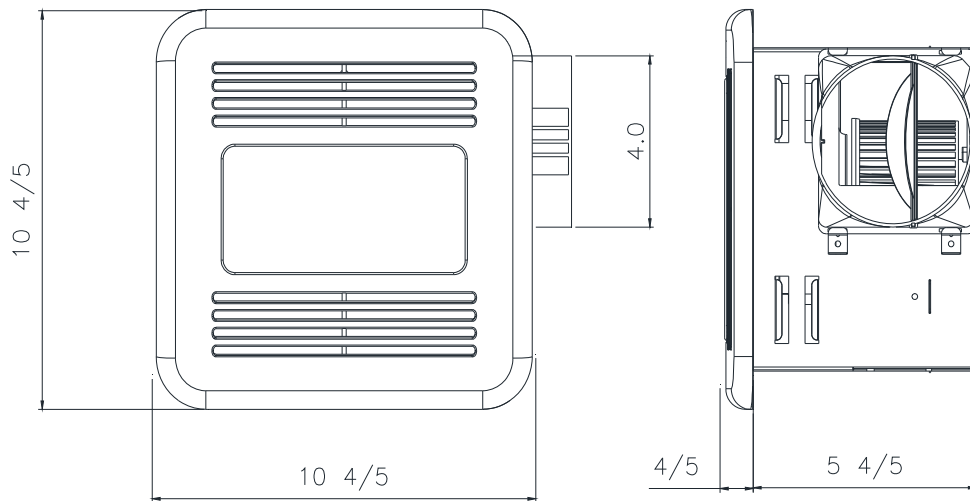

UNIT: INCH

## PRODUCT SPECIFICATIONS

SPECIFICATIONS								
Model No.	Voltage (V)	Frequency (Hz)	Air Flow @0.1"(CFM)	Fan Power @0.1"SP(W)	Max Current (Amps)	Weight (lb.)	Note	LED light spec.
50F-LED / VFB050B4LED1	120	60	50	5.0	0.22	4.8	Single Speed	13.0 Watts, 850Lumens, 3000K
80F-LED / VFB080B4LED1	120	60	80	11.3	0.28	4.8	Single Speed	13.0 Watts, 850Lumens, 3000K

Note: Design and specifications subject to change without notice.



## WARRANTY

### DELTA ELECTRONICS THREE YEAR LIMITED WARRANTY

Delta Electronics Inc. ("Delta Electronics") warrants to the original consumer purchaser in the USA that the Breez ventilation fan products will be free from defects in material or workmanship. This warranty is limited to three (3) years from the original date of purchase.

#### Limitations and Exclusions

1. During the warranty period, a replacement for any defective product will be supplied free of charge for installation by the consumer. The warranty provided herein does not cover charges for labor or other costs incurred in the troubleshooting, repair, removal, and installation service.
2. All returns of defective parts or products must include the product model number, and must be made through an authorized Delta Electronics distributor. Authorized returns must be shipped prepaid. Repaired or replacement products will be shipped by Delta Electronics F.O.B. shipping point.
3. Delta Electronics shall not be liable for any indirect, incidental, consequential, punitive, or special damages arising out of or in connection with products use or performance, regardless of the form of action whether in contract, tort (including negligence), strict product liability or otherwise.
4. This warranty does not extend to fluorescent lamp starters and tubes.
5. The warranty does not cover if user does not comply with manufacturer's installation manual.
6. To qualify for warranty service, you must notify Delta Electronics at the address or telephone number below.
7. Delta Electronics shall have no liability to the original owner-user with respect to any defect caused by abuse, misuse, neglect, improper transportation or storage, improper testing, improper installation, improper operation, improper use, improper maintenance, improper repair, improper alteration, improper modification, tampering or accident of products or parts thereof, or unusual deterioration or degradation of products or parts thereof due to a physical environment beyond the requirements of products' specifications.

Address: 46101 Fremont Boulevard, Fremont, CA 94538

US Toll Free Number: 1-888-979-9889

[www.deltabreez.com](http://www.deltabreez.com)